

Programming Manual

International Edition, Rev. E7





Rev. No.	Released Date	Description		
Rev.B Beta	Apr. 16, 2009	❖ First Release		
Rev.B0	May 05, 2009	Modified " Symbology Reading Control " - "Code 128/EAN-128 Setting" and " GS1 DataBar Setting" Added " Appendix " - "Symbology ID Table".		
Rev.B1	June 22, 2009	Added "Operation Control" - "Presentation Scanning Mode".(Rename to "Presentation Control" on Rev.B4)		
		Added "Operation Control"—"Time Delay to Low Power Mode".		
Rev.B2	Aug. 21, 2009	Added "Symbology Reading Control" - "Composite Code Setting", "PDF/Micro PDF417 Setting", "Codablock F Setting", Korea Post Code Setting".		
		Added "Operation Control"—"SmartStand Power Off Timeout".		
		❖ Added "Condensed DataWizard" - "PDF417/Micro PDF417", "Codablock F", "Korea Post Code"		
		Modified "Appendix"—"Symbology ID Table"		
Rev.B3	Oct. 16, 2009	Added "Host Interface Selection" - "IBM PS/2, 25-30 series keyboard wedge interface".		
		Added "Operation Control" - "Presentation Scanning Auto-sense".		
		❖ Added "Appendix"–"Symbology ID Table"–"Code 128"		
Rev.B4	Mar.05, 2010	Modified "Symbology Reading Control" - "UPC-A & UPC-E Setting"		
		 Renamed "Serial Interface Control"—"Time Out Control" to "Serial Response Time-out". 		
		 Renamed "Operation Control"—"Presentation Scanning Mode" to "Presentation Control" 		
		Renamed "Operation Control"—"Auto Power Off Duration" to "Light Source On Time".		
		Renamed "Operation Control"—" Presentation Scanning Auto-sense" to "Presentation Auto-sense"		
		❖ Modified "Operation Control" - "Good Read Duration"		
		 Added "Operation Control" - " Presentation Sensitivity" 		
		 Added "Appendix"—"Master Default" System Command 		
Rev. B5	Apr.12, 2010	Modified "Operation Control" - " Hands Free Time-out"		
Rev. B6	May 27, 2010	❖ Modified "Serial Interface Control"—"Baud Rate"		
Rev. B7	Jun 25 , 2010	Modified "Symbology Reading Control" - "UPC-A & UPC-E Setting"		
		❖ Modified "Operation Control" - "Time Delay to Low Power Mode"		

Rev. No.	Released Date	Description		
Rev. B8	Sep 29 , 2010	Modified "Symbology Reading Control" - "UPC-A & UPC-E Setting" and "EAN Setting"		
		Modified "Keyboard Interface Control"—"Keyboard Layout (Language) Setting"		
		Added "Operation Control" - "Scan Rate Control" and "Good Read Indicator"		
Rev. B9	Nov 10 , 2010	Modified "Serial Interface Control"—"Baud Rate"		
Rev. C1	Mar 04, 2011	Modified "Serial Interface Control"—"Baud Rate"		
Rev. C2	Mar 22, 2011	Modified "Symbology Reading Control" - "Code 39 Setting"		
		 Modified "Serial Interface Control"—"Protocol, ACK/NAK Setting" 		
Rev. C3	Jul 22, 2011	Renamed "Symbology Reading Control" - " UCC/EAN-128" to "GS1-128"		
		Renamed "Serial Interface Control"—" ACK/NAK Transmission Indication" to "ACK Indication"		
		Modified "Serial Interface Control"—"ACK Indication" and "Serial response time -out".		
		Renamed "Condensed DataWizard" - " UCC/EAN-128" to "GS1-128"		
Rev. C4	Nov 04, 2011	Modified "Symbology Reading Control" - " Codabar/ NW-7 Setting "		
Rev. C5	Jan 02, 2012	Modified "Wand/Laser Emulation Control"—" Code 39/Code 128 Emulation"		
Rev. C6	Mar 05, 2012	Added "Operation Control" - "1D Barcode Forward-reading Indication", "1D Barcode Backward-reading Indication", and "1D Barcode Direction Indication Transmission".		
Rev. C7	Jul 25, 2012	Added "Host Interface Selection"—" USB HID Legacy"		
		Modified "Symbology Reading Control" - "Code 128 Setting"		
		Modified "Wand/Laser Emulation Control"—" Code 39/Code 128 Emulation"		
		Modified "Operation Control" - "Operation Mode Setting", "Presentation Control"		
		Added "Operation Control" - " LED illumination Control" and "LED Illumination Delay"		
Rev. D1	Dec. 18, 2012	 Support 2D Functions. 		
Rev. D2	Apr. 22. 2013	Modified "Symbology Reading Control" - " Data Matrix Setting		
		Modified "Operation Control" - "Batch Reading rule example"		
Rev. D3	Aug. 20, 2013	Modified "Symbology Reading Control" - "Readable Bar Code Setting"		
		Modified "Appendix" - "Symbology ID Table"		

Rev. No.	Released Date	Description
Rev. D4	Sep. 06, 2013	Modified "Condensed DataWizard" - "1D Bar Code Symbology" and "2D Bar Code Symbology"
Rev. D5	Mar. 06, 2014	Modified "Symbology Reading Control" - "GS1 DataBar Setting
		 Added "Appendix" –" USB HID Legacy Mode" Quick Set
Rev. D6	Feb. 06, 2015	Modified "Symbology Reading Control" - "MaxiCode Setting"
Rev. D7	Aug. 17, 2015	Added "Host Interface Selection"—" USB EFT Terminal Mode"
Rev. D8	Dec. 25, 2015	❖ Revised "Revision History"
		❖ Added "Getting Started" - A670 series scanner
Rev. D9	May 31, 2016	Added "Operation Control"—"Buzzer Volume"
Rev. D10	Aug. 04, 2016	Added "Symbology ReadingControl" - "Small DM Code Reading"
Rev. D11	Oct. 11, 2016	Modified "Operation Control"—"Buzzer Volume"
		Modified "Operation Control"—"Buzzer Tone Adjust"
Rev. D12	Jan. 23, 2017	Modified "Operation Control"—"Buzzer Tone Adjust"
Rev. D13	Mar. 09, 2017	Removed "Operation Control" - "Dollar Sign";
		Added "Keyboard Interface Control" - "Dollar Sign Control"
Rev. D14	March. 02, 2018	❖ Added new release model "A780" and "A680".
		Modified "Symbology Reading Control" - "Readable Symbology Setting"—"Popular 1D"
		 Modified "Getting Familiar with Your FuzzyScan" - A780 and A680 series scanner
Rev. D15	Sep. 20, 2018	❖ Added "Operation Control" - "Motion Control"
		Modified the description of "Symbology Reading Control"—"UPC/EAN Security Level"
		 Added information on Code Pages
		 Modified notes on Unique Barcode Reporting

Rev. No.	Released Date	Description
Rev. D16	Nov. 22, 2018	Improved "Symbology Reading Control" – "Code 128 Setting ISBT" - ISBT Concatenation settings
Rev. D17	March. 21, 2019	Modified "Symbology Reading Control" – "QR Code Setting" – "Auto detect QR Code Inverse Reading"
		❖ Modified "Operation Control"—"Motion Control". Redefined "Motion Control" as "Scene Mode".
Rev. E1	Nov. 28, 2019	❖ Added "Serial Port Output"
		 Added "Alt-Code Keyboard" option code in "Keyboard Layout" family code
Rev. E2	Mar. 20, 2020	Renamed "Keyboard Layout Setting" - "Alt-Code Keyboard" to "Universal"
		"Keyboard Interface Control" – "Function Key Emulation":
		Renamed option "Enable ASCII 00-31 code as keyboard function code output" to "Enable Keyboard Function Code Table 1 Output"
		Renamed option "Ctrl-Output" to "Enable Keyboard Function Code Table 2 Output"
		Added option "Enable Keyboard Function Code Table 3 Output"
		Modified "Appendix" – "Keyboard Function Control Table":
		Renamed column title "Key Function" to "Key Function 1"
		Renamed column title "Ctrl-Output" to "Key Function 2"
		Added column "Key Function 3"
Rev. E3	May 29, 2020	Modified "Symbology Reading Control" – "Small DM Code Reading" to "Damaged DM Code Reading".
		Modified "Operation Control" – "Operation Mode" for F & L Series
		❖ Added option "Multiple Read Mode"
Rev. E4	Aug. 07, 2020	❖ Added new release model "A560"
Rev. E5	Aug, 14, 2020	❖ "Symbology Reading Control" – "QR Code Setting"
		Added function option "QR Code Mirror Images"

Rev. E6	Mar. 18, 2021	*	"Keyboard Interface Control" – "Keyboard Output": " Added option "Linux Unicode Output"	
		*	"Serial Interface Control" - "Record Suffix": Added option "User Define"	
Rev. E7	Apr. 27,2021	*	"Aiming Control"-Delay Aiming Control 改成Pre-decode Aiming Control	
		*	Delay aiming 改成 Pre Decode Aiming Time	
		*	"Symbology Reading Control"-GS1-128 Setting:	

❖ Added "GS1-128 Function Control", "GS1-128 FNC1 Setting", "GS1-128 Element String Separator", "GS1-128 Data Separator", "GS1-128 Error Converting"

- © Copyright Cino Group
- © Copyright PC Worth Int'l Co., Ltd

Cino makes no warranty of any kind with regard to this publication, including, but not limited to, the implied warranty of merchantability and fitness for any particular purpose. Cino shall not be liable for errors contained herein or for incidental consequential damages in connection with the furnishing, performance, or use of this publication. This publication contains proprietary information that is protected by copyright. All rights are reserved. No part of this publication may be photocopied, reproduced or translated into any language, in any forms, in an electronic retrieval system or otherwise, without prior written permission of Cino.All product information and specifications shown in this document may be changed without prior notice.

Warranty

Cino warrants its products against defects in workmanship and materials from the date of shipment, provided that the product is operated under normal and proper conditions. The warranty provisions and durations are furnished by different warranty programs. The above warranty does not apply to any product which has been (i) misused; (ii) damaged by accident or negligence; (iii) modified or altered by the purchaser or other party; (iv) repaired or tampered by unauthorized representatives; (v) operated or stored beyond the specified operational and environmental parameters; (vi) applied software, accessories or parts are not supplied by Cino; (vii) damaged by circumstances out of Cino's control, such as, but not limited to, lightning or fluctuation in electrical power. Any defective product must follow the warranty program and RMA procedures to return Cino for inspection.

Regulatory

Part 15 Subpart B

EN55022, EN55024, EN61000-3-2, EN61000-3-3, EN60950-1, EN61000-6-3, EN61000-6-2



Class B ITE

CNS13438

LED Eye Safety

IEC62471 Exempt group

KN22, KN24 (KN61000-2,-3,-4,-5,-6,-8,-11)



AS/NZS CISPR 22 Class B

Laser Eve Safety IEC60825-1 Class 1

Table of Contents

GETTING STARTED	1
Getting Familiar with Your Scanner	1
Connecting to Your Host	3
Using Accessories	4
CONFIGURING YOUR SCANNER	5
Barcode Programming Manual	5
Programming Procedures	6
Host Interface Selection	10
Symbology Reading Control	11
User Defined Symbol ID	11
Symbology ID Transmission	13
Readable Bar Code Setting	14
Code 39/Code 32 Setting	16
Code 39 Setting	17
Codabar/NW-7 Setting	18
UPC-A & UPC-E Setting	19
EAN Setting	22
UCC Coupon Extended Code Setting	25
IATA& Interleaved 2 of 5 Setting	26
Code 25 Family Setting	27
Code 11 & Code 93 Setting	28

MSI/Plessey Setting	29
Code 128 Setting	30
GS1-128 Setting	31
GS1-128 Setting (continued)	32
UK/Plessey Setting	33
Telepen Setting	34
GS1 DataBar Setting	35
Composite Codes, Codablock F, PDF417/MicroPDF417 Setting	36
Code 16K & Code 49 Setting	37
QR Code Setting	38
Data Matrix Setting	39
MaxiCode Setting	40
Aztec Code Setting	41
Australian Post, US Planet, US Postnet, British Post,& Japan Post Setting	42
Netherlands KIX Code, Intelligent Mail,& Korea Post Code Setting	43
Keyboard Interface Control	44
Keyboard Layout (Language) Setting	44
Record Suffix, Preamble, Postamble, FNC1 Symbol Character Transmission	45
Caps Lock & Caps Lock Release Control	46
Delay Setting	47
Function Key &Key Pad Emulation, Upper/Lower Case Setting, Dollar Sign Control	48
Code Page: Barcode Encoding Format, Keyboard Output	49
Serial Interface Control	52

	STX/ETX Control, Record Suffix, Preamble, Postamble, FNC1 Symbol Char. Transmission	52
Seri	al Interface Control	53
	FNC1 Symbol Char. Transmission	53
	Delay Setting	54
	Protocol, ACK/NAK Setting	55
	Response Time-out Setting, Baud Rate, Data Frame	56
	Code Page: Barcode Encoding Format, Serial Port Output (A& PA Series Only)	57
War	nd/Laser Emulation Control (F & L Series)	59
	Output Polarity, Signal State, Narrow/Wide Ratio, Margin & Module Time	59
Ope	ration Control	61
	Operation Mode	61
	Presentation Control, Scan Rate, Flash Duty, SmartStand Power off Timeout	63
	LED Illumination Control, Illumination Delay	64
	Laser Aiming Control, 1D Barcode Reading Direction	65
	Operation Mode, Presentation & Illumination Control	66
	Aiming Control, Pre Decode Aiming Timer, Decode Aiming Control	68
	Center Alignment, Unique Barcode Reporting	69
	Smart Scene	70
	Batch Reading	71
	Buzzer Tone Adjust, Power On & Good Read Indicator, Vibrator Control	75
	Buzzer Volume	76
	Redundancy & 1D Code Inverse Reading	77
	Reread Delay & Good Read Delay Control	78

	Light Source On Time, Hands Free Time-out	79
	Good Read Duration, Time Delay to Low Power Mode	80
	Presentation Auto-Sense & Sensitivity	81
	Condensed DataWizard	82
	Preamble, Postamble, Data Length, Symbol ID Transmission	82
	Data Formatter Setting	83
	Data Verifier Setting	84
	Data Replacer Setting	85
	Data Organizer Setting	86
A	PPENDIX	90
	Symbology ID Table	91
	Keyboard Function Code Table	93
	Code Page – Table of Corresponding Languages	95
	Code Page – Unicode Hex Input Setup	96
	ASCII Input Shortcut	100
	Host Interface Quick Set Commands	101
	Operation Mode Quick Set Commands (F & L Series)	102
	Operation Mode Quick Set Commands (A Series)	103
	Option Codes	104
	System Commands	105

GETTING STARTED


Getting Familiar with Your Scanner

Thank you for choosing Cino FuzzyScan Bar Code Scanner. All FuzzyScan scanners deliver world-class performance for a broad range of applications to unleash your productivity.


FuzzyScan family includes **A** series area imager, **F** series linear imager and **L** series laser imager. The **Antimicrobial** models are available for A770, L780 and F780 series scanners which are equipped with Disinfectant-ready Housing and Vibrator. Moreover, the option of **Vibrator** is available for all other series upon request. For more details, please visit our web site or contact your supplier.

This document provides an easy reference for installation and operation purpose. The complete documentation is available at www.cino.com.tw.


A770 Series

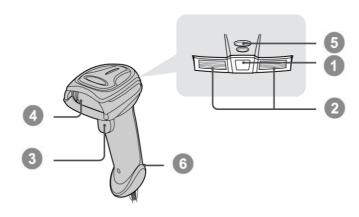

A780 Series

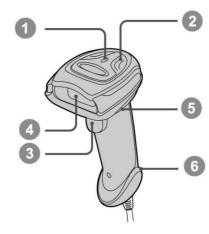


A680 Series

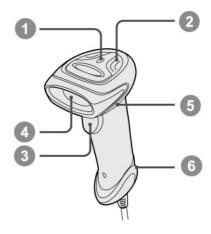


- Power Indicator
- Scan Window
- Status Indicator
- Beeper
- Trigger
- 6 Cable Release Hole

cino°


F790/F780/ L780 Series

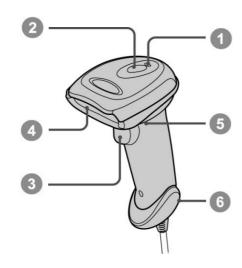

A560/F560 Series

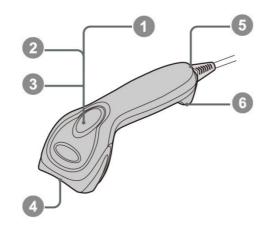


A670/A660/F680/L680 Series

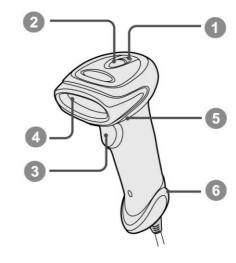


- Power Indicator
- Status Indicator
- Trigger
- Scan Window
- Beeper
- 6 Cable Release Hole

Connecting to Your Host

FuzzyScan scanners support USB and RS-232 Serial interfaces. Please choose your desired interface cable, then plug it into the cable interface port of the scanner and connect it to the host. If you would like to remove the cable, please straighten one end of a paper clip, and then insert it into the cable release hole to pull out the cable.

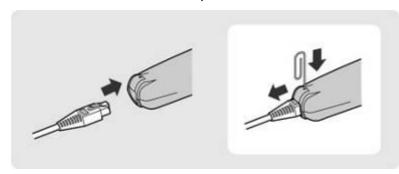

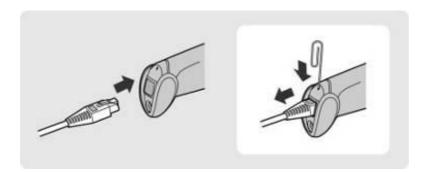


RS232 Serial





USB HID & USB COM




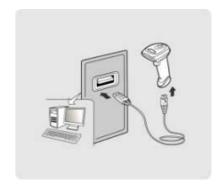

Using Accessories


You can enhance productivity of your workforce by using various accessories to fulfill a wide variety of application demand.

Universal Holder

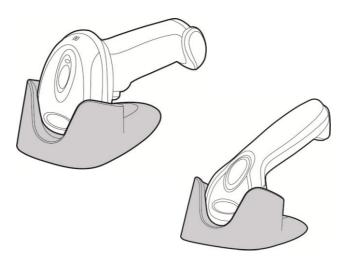

The stylish Universal Holder is designed for storing your scanner when not in use. It serves to protect the scanner from lens-scratched or falling. Moreover, its artistic-design enhances the entire value of the scanner. But please note that the holder is not applicable for *A series* scanners.

Hand-free SmartStand

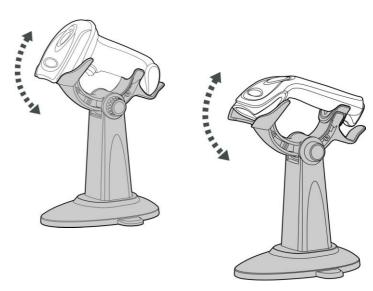

SmartStand is specifically designed for hand-free applications to maximize user's comfort and productivity. You can adjust the scanner holder to desired position for optimized scanning.

Thanks to the auto-sense design, the scanner is capable of switching between presentation scanning and hand-held scanning automatically while working with SmartStand. But please note that this feature is not available for **A500/F500** series scanners.

In presentation mode, the barcode may not be detected by the scanner in an environment with very dim ambient lighting. You can select higher sensitivity level through the setting of **Presentation Sensitivity** to increase scanner's sensitivity.

CONFIGURING YOUR SCANNER

Barcode Programming Manual

The FuzzyScan bar code commands are specially designed **Proprietary** bar code labels which allow you to set the FuzzyScan internal programming parameters. There are **System Command**, **Family Code** and **Option Code** for programming purpose.

Each programmable family and bar code command label is listed on the same page with major system commands. The detailed explanations and special programming flowchart are printed on facing or following pages. You can read the explanation and set the FuzzyScan concurrently.

A supplemental bar code command menu incorporates the bar code command labels of System Command and Option Code. As you set the FuzzyScan, open the bar code command menu to find the option code page. You may scan the desired family code and option code to set FuzzyScan. If you want to change the programming family for multiple settings, you need only turn over the programming page to find next desired programming family.

System Command

The System Command is the highest level bar code command which directs FuzzyScan to perform immediate operations, such as entering programming mode (**PROGRAM**), exiting programming mode (**EXIT**), listing system information (**SYSLIST**), recovering to factory preset configurations (M_DEFAULT) and so on. Please note that all system commands will take a few seconds to complete the operations. User must wait for the completion beeps before scanning another bar code.

Family Code

The Family Code is scanned to select the user desired programming family. FuzzyScan has already provided more than one hundred programming families to meet any specific requirements.

Option Code

The Option Codes is a set of bar code commands represented by "**0–9**", "**A–F**" and finishing selection (**FIN**). For most setting, you must select at least one option code following the family code selection to set the desired parameter for the selected programming family.



Programming Procedures

As you scan the bar code command to select the desired parameters, information about the final selected parameters represented by the bar code commands are stored in the FuzzyScan's internal Flash Memory ASIC or memory. If you turn off the unit, the Flash Memory ASIC or non-volatile memory retains all programming options. You need not re-program the FuzzyScan if you want to keep the existing configurations in the next power on.

The programming procedures of FuzzyScan are designed as simple as possible for ease of setting. Most programming families take the **Single Scan Selection** programming procedure. But several programming families have more complex and flexible programmable options, and you must take **Multiple Scans Selection**, **Cycling Scan Selection or Dual Level Selection** to complete their programming procedures. Each kind of programming procedure is listed in the following pages for your reference. Please give careful attention to become familiar with each programming procedure.

If the programming family must take multiple scans selection, cycling scan selection, or dual level selection procedures, the family of the programming menu will be marked with the matched representing symbol of **Programming Category** (P.C.) in bold font listed in the following table. You can easily find the bold mark in the programming menu, and refer to their flowcharts for details. Before setting the FuzzyScan, please also refer to the "Beeping Indications" listed in Appendix to understand the details of programming beeping indications. It will be very helpful for you to know the existing status while you are programming the FuzzyScan.

Conventions of Programming Menu

Conventions	Descriptions	
◆ Factory Default Value		
P.C.	Programming Category	
	SS: Single Scan selection	
	MS: Multiple Scans selection	
	CS : Cycling Scan selection	
	DS : Dual level Scan selection	
()	Necessary Option Code	
[]	Selectable Option Code	

Program & End



FuzzyScan will enter programming mode, and inhibit all non-programming functions.



FuzzyScan will exit programming mode, and store all parameters in Flash Memory ASIC or non-volatile memory, then issue the completion beeping.

Please note that the FuzzyScan will take 3-4 seconds to store parameters in internal Flash Memory ASIC or non-volatile memory after you scan the "END". Please don't turn off the power before the completion beeping. It may destroy all configured parameters.

System List, Group & Master Default



FuzzyScan will list the product information and revision number to host via selected host interface, then issue the completion beeping.




FuzzyScan will recover all programmable parameters into factory preset configurations, then issue the completion beeping.

Single scan selection

Scan "PROGRAM" Enter programming mode. Select one of desired Scan programming families. One of Family Codes Select one option code of Scan desired parameter. One of **Option** Codes Want to select another Yes Repeat programming family? Selection No Scan Exit programming mode. "END"

Multiple scans selection

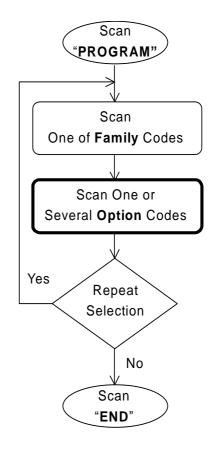

Enter programming mode.

Select one of desired programming families.

- Select one or several option codes to select desired parameters.
- 2. If it's necessary, scan "FIN" to terminate option code selection.


Want to select another programming family?

Exit programming mode.

Cycling scan selection

Scan "PROGRAM" Enter programming mode. Select one of desired Scan programming families. One of Family Codes Cycling select one or several option codes of Scan One of **Option** Codes desired parameters as "Single" or "Multiple" scans selection. Scan "FIN" Finish cycling selection. (If necessary) Yes Repeat Selection Want to select another programming family? Νo Scan Exit programming mode. "END"

Dual level selection

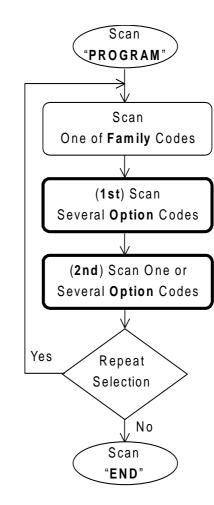

Enter programming mode.

Select one of desired programming families.

Select several option codes of desired parameters.

- Select one or several option codes of desired parameters.
- If it's necessary, scan "FIN" to terminate option code selection.

Want to select another programming family?

Exit programming mode.





Host Interface Selection



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Host Interface Selection	MS MS MS MS MS MS MS MS MS MS	IBM PS/2, 25-30 series keyboard wedge interface Standard/TTL RS-232 peer-to-peer serial Wand Emulation USB Com Port Emulation PS/2 (DOS/V) direct link (keyboard replacement) PS/2 (DOS/V) keyboard wedge turbo mode PS/2 (DOS/V) keyboard wedge standard mode Laser emulation USB HID standard mode USB HID turbo mode USB HID Legacy USB EFT Terminal Mode	02 06 08 09 10 13 14 17 18 19 20 21

[■] A series doesn't support Wand emulation, Laser emulation, USB HID Legacy Mode.





Symbology Reading Control User Defined Symbol ID



 $F_DEFAULT$

TROOKAW				I_DEIAGEI
Family Code Selection	P.C	Parameter Selection	Option Code	2nd Option Code
Symbol ID : 1 character	DS	Code 128 (default= B)	00	(1 character)
		GS1-128 (default=C)	01	(1 character)
		UPC-A (default= A)	02	(1 character)
		EAN-13 (default=F)	03	(1 character)
		Codabar/NW-7 (default= D)	04	(1 character)
		Code 39/Code 32 (default= G)	05	(1 character)
		Code 93 (default= H)	06	(1 character)
		Standard/Industrial 2 of 5 (default=I)	07	(1 character)
		Interleaved 2 of 5 (default= J)	08	(1 character)
		Matrix 2 of 5 (default= K)	09	(1 character)
		China Postal Code (default=L)	10	(1 character)
		German Postal Code (default= M)	11	(1 character)
		IATA (default= 0)	12	(1 character)
		Code 11 (default= P)	13	(1 character)
		MSI/Plessey (default=R)	14	(1 character)
		UK/Plessey (default=S)	15	(1 character)
		Telepen (default=T)	16	(1 character)
		GS1 DataBar (default= X)	17	(1 character)
		UPC-E (default= E)	18	(1 character)
		EAN-8 (default= N)	19	(1 character)
		Trioptic Code 39 (default= W)	20	(1 character)
		UCC Coupon Extended Code (default= Z)	21	(1 character)
		PDF417/Micro PDF417 (default=V)	22	(1 character)
		Codablock F (default=Y)	23	(1 character)
		Code 16K (default=Q)	24	(1 character)
		Code 49 (default= U)	25	(1 character)
		Korea Post Code (default=a)	26	(1 character)
		QR & Micro QR Code (default=b)	28	(1character)
		Data Matrix (default=c)	29	(1 character)
		Maxi Code (default=d)	30	(1 character)





Symbology Reading Control User Defined Symbol ID (continued)



 $F_DEFAULT$

Family Code Selection	P.C	Parameter Selection	Option Code	2nd Option Code
Symbol ID : 1 character	DS	Aztec Code (default=e)	31	(1 character)
		Chinese Sensible (default=f)	32	(1 character)
		Australian Post (default=g)	33	(1 character)
		British Post (default=h)	34	(1 character)
		Intelligent Mail (USPS 4CB/One Code) (default=j)	36	(1 character)
		Japan Post (default=k)	37	(1 character)
		Netherlands KIX Post (default=I)	38	(1 character)
		US Planet (default=m)	39	(1 character)
		US Postnet (default=o)	41	(1 character)





Symbology Reading Control Symbology ID Transmission



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Symbology ID Transmission	SS SS	Disable symbology ID transmission ◆ Enable prefix CINO symbology ID transmission	0
	SS	Enable suffix CINO symbology ID transmission	2
	SS SS	Enable both prefix and suffix CINO symbology ID transmission Enable prefix AIM symbology ID transmission	3 4
	SS	Enable suffix AIM symbology ID transmission	5
	SS	Enable both prefix and suffix AIM symbology ID transmission	6

FuzzyScan Programming Manual

cino



Symbology Reading Control Readable Bar Code Setting



F_DEFAULT

PROGRAM			F_DEFAULI
Family Code Selection	P.C	Parameter Selection	Option Code
Doodahla Symbology Catting	SS	Auto ◆	00
Readable Symbology Setting	CS	Popular 1D	C0
	CS	Code 128 *	01
	CS	GS1-128 *	31
	CS	UPC-A*	02
	CS	UPC-E *	03
	CS	EAN-13 *	04
	CS	EAN-8 *	05
	CS	Codabar/NW-7 *	06
	CS	Code 39 *	07
	CS	Trioptic Code 39	47
	CS	Standard/Industrial 2 of 5	08
	CS	Matrix 2 of 5	38
	CS	Interleaved 2 of 5 *	48
Remember to scan "FIN" to terminate	CS	China Postal Code	58
this selection. But if you select the	CS	Germany Postal Code	68
"Auto", FuzzyScan will terminate this	CS	Code 93 *	09
	CS	Code 11	10
selection automatically.	CS	MSI/Plessey	11
	CS	UK/Plessey	12
	CS	Telepen	13
	CS	GS1 DataBar (RSS-14) *	14
	CS	IATA	15
	CS	PDF417 * /Micro PDF417	17
	CS	Codablock F	18
	CS	Code 16K	19
	CS	Code 49	20
	CS	Korea Post Code	21
	CS	QR Code */ Micro QR Code *	A0
	CS	Data Matrix *	A1
	CS	MaxiCode	A2
	CS	Aztec Code *	A3
	CS	Chinese Sensible (Han Xin) Code	A4





Symbology Reading Control Readable Bar Code Setting (continued)



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Readable Symbology Setting	CS	Australian Post	В0
Readable Symbology Setting	CS	British Post	B1
	CS	Intelligent Mail barcode	B3
	CS	Japanese Post	B4
	CS	KIX Post	B5
	CS	Planet Code	В6
	CS	Postnet	B8

If your application is known, you may select those known symbologies only to increase the reading speed and decrease the possibility of reading error. Furthermore, to add the "Symbology ID" into the transmitted data is also helpful to identify the specific symbology.

[■] Above symbologies marketed with * are enabled as default. When you select "Auto", the scanner only reads those symbologies marked with *.

^{■ &}quot;Popular 1D" includes "Code 128", "GSA-128", "UPC-A", "UPC-E", "EAN-13", "EAN-8", "Codabar/NW-7", "Code 39", " Interleaved 2 of 5", "Code 93", "GS1 DataBar (RSS-14)".

[•] When you set the minimum and maximum length of each symbology, please note the data length of scanned bar code doesn't include start/stop characters.





Symbology Reading Control Code 39/Code 32 Setting



F_DEFAULT

			-
Family Code Selection	P.C	Parameter Selection	Option Code
Code 39 Family Setting	SS	Disable Code 39	0
	SS	Enable Code 39 ◆	1
	SS	Select Standard Code 39 as primary format ◆	2
	SS	Select Full ASCII Code 39 as primary format	3
	SS	Select Code 32 (PARAF, Italian Pharmaceutical) as primary format	4
	SS	Disable start/stop symbol transmission ◆	5
	SS	Enable start/stop symbol transmission	6
	SS	Disable Code 32 leading A transmission ◆	7
	SS	Enable Code 32 leading A transmission	8
	SS	Disable MOD 43 check digit verification ◆	9
	SS	Enable MOD 43 check digit verification	Α
	SS	Disable check digit transmission ◆	В
	SS	Enable check digit transmission	С
	SS	Disable Code 39 buffering ◆	D
	SS	Enable Code 39 buffering	Е
Trioptic Code 39 Setting	SS	Disable Trioptic Code 39 ◆	0
	SS	Enable Trioptic Code 39	1
Code 39 Min. Length	SS	Default (01) ◆	FIN
	MS	01-Maximum	(2 digits)
		Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	
Code 39 Max. Length	SS	Default (98) ◆	FIN
	MS	98-Minimum	(2 digits)
		Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	

[■] Trioptic Code 39 and Code 39 Full ASCII cannot be enabled simultaneously.





Symbology Reading Control Code 39 Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Code 39 Security Level	SS	Level 0	0
	SS	Level 1	1
	SS	Level 2◆	2
	SS	Level 3	3

■ Code 39 Security Level

The scanner offers four levels of decode security for Code39 bar codes:

- Level 0: If you are experiencing misread of poorly-printed or serious out-of-spec. bar codes in level 1, please select level 0.
- Level 1: If you are experiencing misread of poorly-printed or out-of-spec. bar codes in level 2, please select level 1.
- Level 2: This is the default setting which allows the scanner to operate fastest, while providing sufficient security in decoding "in-spec" Code39 bar codes.
 - Level 3: If you failed to read poorly-printed or out-of-spec. bar codes in level 2, please select level 3. This is the most aggressive setting and may increase the misread.







Symbology Reading Control Codabar/NW-7 Setting



F_DEFAULT

PROGRAM			F_DEFAULI
Family Code Selection	P.C	Parameter Selection	Option Code
Codabar Setting	\$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$	Disable Codabar Enable Codabar ◆ Select Codabar standard format ◆ Select Codabar ABC format Select Codabar CLSI format Select Codabar CX format Disable start/stop symbol transmission ◆ Enable ABCD/ABCD start/stop symbol transmission Enable abcd/abcd start/stop symbol transmission Enable ABCD/TN*E start/stop symbol transmission Enable abcd/tn*e start/stop symbol transmission Disable check digit verification ◆ Enable check digit transmission	0 1 2 3 4 5 6 7 8 9 A B C D E
Codabar Check Digit Settings	\$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$	Modulus 16 ◆ Modulus 10/weight 3 Modulus 11 Modulus 10/weight 2 7 check DR Weight Modulus 11 Runes (Modulus 10/weight 2)	0 1 2 3 4 5 6
Codabar Min. Length	SS MS	Default (04) ◆ 01-Maximum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
Codabar Max. Length	SS MS	Default (98) ◆ 98-Minimum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)







Symbology Reading Control UPC-A & UPC-E Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
UPC Family Setting	SS	Disable UPC-A	0
	SS	Enable UPC-A◆	1
	SS	Disable UPC-E	2
	SS	Enable UPC-E◆	3
	SS	Disable UPC-E expansion ◆	4
	SS	Enable UPC-E expansion	5
	SS	Disable UPC standardization ◆	6
	SS	Enable UPC standardization	7
	SS	Disable UPC numeric system	8
	SS	Enable UPC numeric system ◆	9
	SS	Disable UPC-A check digit transmission	Α
	SS	Enable UPC-A check digit transmission ◆	В
	SS	Disable UPC-E check digit transmission	С
	SS	Enable UPC-E check digit transmission ◆	D
	SS	Disable UPC "leading 1" portion ◆	Е
	SS	Enable UPC "leading 1" portion	F

• When enable UPC-E expansion, the UPC-E decoded data will be converted to UPC-A format and affected by related setting, such as UPC standardization, UPC numeric system, UPC-A check digit transmission.

■ UPC-E & EAN-8 Expansion : Expand the 8-digit UPC-E and 8-digit ENA-8 to 12-digit UPC-A and 13-digit EAN-13.

■ UPC-A Standardization : Expand the 12-digit UPC-A to 13-digit EAN-13 with 1 zero insertion.

■ UPC Lead 1 Numeric System :To read UPC leading with the 1 numeric system, you must enable this option.

WPC Selection (UPC/EAN/CAN)	Basic Length	Disable Check Digit	Disable Numeric System	With 2-digit Addendum	With 5-digit Addendum	Enable Standardization	Enable Expansion
UPC-A	12	- 1	- 1	+ 2	+ 5	+ 1	0
UPC-E	8	- 1	- 1	+ 2	+ 5	+ 1	+ 4
EAN-13	13	- 1	NC	+ 2	+ 5	NC	0
EAN-8	8	- 1	NC	+ 2	+ 5	NC	+ 5





Symbology Reading Control UPC-A & UPC-E Setting (continued)



F_DEFAULT

i itooru uu			I_DLI/(OLI
Family Code Selection	P.C	Parameter Selection	Option Code
UPC Supplement Setting	SS	Select UPC without supplement digits ◆	0
-	SS	Select UPC with only 2 supplement digits	1
	SS	Select UPC with only 5 supplement digits	2
	SS	Select UPC with 2/5 supplement digits	3
	SS	Disable force supplement digits output ◆	4
	SS	Enable force supplement digits output	5
	SS	UPC Family Addenda Separator Off ◆	6
	SS	UPC Family Addenda Separator On	7
UPC/EAN Security Level	SS	Level 0	0
	SS	Level 1 ◆	1
	SS	Level 2	2
		Only available for UPC-A & EAN-13	
Supplement Scan Voting	SS	None	0
	SS	Level 1	1
	SS	Level 2	2
	SS	Level 3◆	3
	SS	Level 4	4
	SS	Level 5	5
	SS	Level 6	6
	SS	Level 7	7
	SS	Level 8	8
	SS	Level 9	9
	SS	Level 10	A
	SS	Level 11	В
	SS	Level 12	С
	SS	Level 13	D



■ UPC/EAN Security Level

The scanner offers three levels of decode security for UPC/EAN bar codes:

- Level 0: If you are experiencing misread of poorly-printed or out-of-spec. bar codes, especially in characters 1, 2, 7, and 8 in level 1, please select level 0. Selection of this security level may significantly impair the decoding ability of the scanner.
- Level 1: This is the default setting which allows the scanner to operate fastest, while providing sufficient security in decoding "in-spec" UPC/EAN bar codes.
- Level 2: If you failed to read poorly-printed or out-of-spec. bar codes in level 1, please select level 2. This is the most aggressive setting and may increase the misread.
- The **Supplement Scan Voting** is the number of times the same UPC/EAN with 2/5 supplement digits has to be decoded before it is transmitted. It is helpful when decoding a mix of UPC/EAN symbols with and without supplement digits. This function is effective when you select UPC/EAN with only 2 supplement digits, UPC/EAN with only 5 supplement digits or UPC/EAN with 2/5 supplement digits. The default value is Level 3. When you select higher level, it may impact the reading speed on poorly-printed, low contrast or damage barcode labels.





Symbology Reading Control EAN Setting



F_DEFAULT

FROGRAM			I _DLI AULI
Family Code Selection	P.C	Parameter Selection	Option Code
EAN Setting	SS	Disable EAN-13	0
	SS	Enable EAN-13◆	1
	SS	Disable EAN-8	2
	SS	Enable EAN-8 ◆	3
	SS	Disable EAN-8 expansion ◆	4
	SS	Enable EAN-8 expansion	5
	SS	Disable EAN-13 check digit transmission	6
	SS	Enable EAN-13 check digit transmission ◆	7
	SS	Disable EAN-8 check digit transmission	8
	SS	Enable EAN-8 check digit transmission ◆	9
	SS	Disable ISBN/ISSN Conversion reading check ◆	A
	SS	Enable ISBN/ISSN Conversion reading check	В
EAN Supplement Setting	SS	Select EAN without supplement digits ◆	0
	SS	Select EAN with only 2 supplement digits	1
	SS	Select EAN with only 5 supplement digits	2
	SS	Select EAN with 2/5 supplement digits	3
	SS	Disable force supplement digits output ◆	4
	SS	Enable force supplement digits output	5
	SS	EAN Addenda Separator Off ◆	6
	SS	EAN Addenda Separator On	7
Supplement Scan Voting	SS	None	0
Cappiement Cean Voting	SS	Level 1	1
	SS	Level 2	2
	SS	Level 3◆	3
	SS	Level 4	4
	SS	Level 5	5
	SS	Level 6	6
	SS	Level 7	7
	SS	Level 8	8
	SS	Level 9	9
	SS	Level 10	A
	SS	Level 11	В
	SS	Level 12	C
	SS	Level 13	D



■ The Supplement Scan Voting is the number of times the same UPC/EAN with 2/5 supplement digits has to be decoded before it is transmitted. It is helpful when decoding a mix of UPC/EAN symbols with and without supplement digits. This function is effective when you select UPC/EAN with only 2 supplement digits, UPC/EAN with only 5 supplement digits or UPC/EAN with 2/5 supplement digits. The default value is Level 3. When you select higher level, it may impact the reading speed on poorly-printed, low contrast or damage barcode labels.





Symbology Reading Control EAN Setting



F_DEFAULT

			_
Family Code Selection	P.C	Parameter Selection	Option Code
UPC/EAN Security Level	SS	Level 0	0
0. 0. ± 000 , ±0.00.	SS	Level 1 ◆	1
	SS	Level 2	2
		Only available for UPC-A & EAN-13	
EAN Supplement Control	SS	Disable all specific prefix supplement digital output◆	0
	SS	Enable all specific prefix supplement digital output	1
	SS	Enable 491 Supplement Digit Output	2
	SS	Enable 978/979 Supplement Digit Output	3
	SS	Enable 977 Supplement Digit Output	4
	SS	Enable 378/379 Supplement Digit Output	5
	SS	Enable 414/419 Supplement Digit Output	6
	SS	Enable 434/439 Supplement Digit Output	7

■ UPC/EAN Security Level

The scanner offers three levels of decode security for UPC/EAN bar codes:

- Level 0: If you are experiencing misread of poorly-printed or out-of-spec. bar codes, especially in characters 1, 2, 7, and 8 in level 1, please select level 0. Selection of this security level may significantly impair the decoding ability of the scanner.
- Level 1: This is the default setting which allows the scanner to operate fastest, while providing sufficient security in decoding "in-spec" UPC/EAN bar codes.
- Level 2: If you failed to read poorly-printed or out-of-spec. bar codes in level 1, please select level 2. This is the most aggressive setting and may increase the misread.

■ EAN Supplement Control

If you select EAN with only 2, or 5 or 2/5 supplement digits and enable 491 prefix supplement digit output, the scanner will transmit EAN with 2, or 5 or 2/5 supplement digits bar codes starting with 491 prefix. The EAN without supplement digit **will not** be transmitted.

If you select EAN with only 2, or 5 or 2/5 supplement digits and enable the other except 491 prefix supplement digit output, the scanner will transmit EAN with 2, or 5, or 2/5 supplement digits bar codes starting with specific prefix. The EAN without supplement digit will be transmitted.





Symbology Reading Control UCC Coupon Extended Code Setting



F DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
UCC Coupon Extended Code	SS SS	Disable UCC Coupon Extended Code ◆ Enable UCC Coupon Extended Code	0 1

[■] UCC Coupon Extended Code

When UCC coupon extended code function is enabled, scanner decodes UPC-A barcodes starting with digit "5", EAN-13 barcodes starting with digit "99" and GS1-128 Coupon Codes. UPC-A, EAN-13and EAN-128 must be enabled to scan all types of Coupon Codes.







Symbology Reading Control IATA& Interleaved 2 of 5 Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
IATA Setting	SS	Disable IATA ◆	0
	SS	Enable IATA	1
	SS	Select 15-digit fixed length IATA checking ◆	2
	SS	Select variable length IATA	3
	SS	Disable check digit verification ◆	4
	SS	Enable check digit automatic verification	5
	SS	Enable S/N checking digit verification only	6
	SS	Enable CPN checking digit verification only	7
	SS	Enable CPN, Airline and S/N check digit verification	8
	SS	Disable check digit transmission ◆	9
	SS	Enable check digit transmission	A
	SS	Disable start/stop symbol transmission ◆	В
	SS	Enable start/stop symbol transmission	С
Interleaved 2 of 5 Setting	SS	Disable Interleaved 2 of 5	0
	SS	Enable Interleaved 2 of 5 ◆	1
	SS	Select Interleaved 2 of 5 as primary format◆	2
	SS	Select German Postal Code as primary format	3
	SS	No check character ◆	4
	SS	Validate USS check digit	5
	SS	Validate OPCC check digit	6
	SS	Disable check digit transmission ◆	7
	SS	Enable check digit transmission	8





Symbology Reading Control Code 25 Family Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Code 25 Setting	SS SS	Disable Standard/Industrial 2 of 5 ◆ Enable Standard/Industrial 2 of 5	0 1
	SS SS SS SS SS	Disable Matrix 2 of 5 ◆ Enable Matrix 2 of 5 Disable China Postal Code ◆ Enable China Postal Code Disable check digit verification ◆ Enable check digit verification	2 3 4 5 6 7
	SS SS	Disable check digit transmission ◆ Enable check digit transmission	8 9
Code 25 Family Min. Length	SS MS	Default (04) ◆ 01-Maximum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
Code 25 Family Max. Length	SS MS	Default (98) ◆ 98-Minimum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)

For Code25 setting, we recommend you to select **only one** type of Code 25 or set the **maximum/minimum barcode length.** To decode all types of Code 25 or to variable length of Code 25 will increase the possibility of reading error.





Symbology Reading Control Code 11 & Code 93 Setting



F_DEFAULT

			_
Family Code Selection	P.C	Parameter Selection	Option Code
Code 11 Setting	SS	Disable Code 11 ◆	0
	SS	Enable Code 11	1
	SS	Disable check digit verification ◆	2
	SS	Select 1-check digit verification	3
	SS	Select 2-check digit verification	4
	SS	Disable check digit transmission ◆	5
	SS	Enable check digit transmission	6
Code 11 Min. Length	SS	Default (04) ◆	FIN
	MS	01-Maximum	(2 digits)
		Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate	
		this selection automatically.	
Code 11 Max. Length	SS	Default (98) ◆	FIN
	MS	98-Minimum	(2 digits)
		Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate	
		this selection automatically.	
Code 93 Setting	SS	Disable Code 93	0
	SS	Enable Code 93◆	1
	SS	Disable check digit transmission ◆	2
	SS	Enable check digit transmission	3
Code 93 Min. Length	SS	Default (01) ◆	FIN
	MS	01-Maximum	(2 digits)
		Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate	
		this selection automatically.	
Code 93 Max. Length	SS	Default (98) ◆	FIN
	MS	98-Minimum	(2 digits)
		Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate	
		this selection automatically.	





Symbology Reading Control MSI/Plessey Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
MSI/Plessey Setting	SS	Disable MSI/Plessey ◆	0
, , , , , , , , , , , , , , , , , , , ,	SS	Enable MSI/Plessey	1
	SS	Select MOD 10 check digit ◆	2
	SS	Select MOD 10-10 check digit	3
	SS	Select MOD 11-10 check digit	4
	SS	Disable check digit transmission ◆	5
	SS	Enable check digit transmission	6
MSI/Plessey Min. Length	SS	Default (04) ◆	FIN
	MS	01-Maximum	(2 digits)
		Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	
MSI/Plessey Max. Length	SS	Default (98) ◆	FIN
	MS	98-Minimum	(2 digits)
		Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	





Symbology Reading Control Code 128 Setting



F_DEFAULT

P.C	Parameter Selection	Option Code
SS	Disable Code 128	0
SS	Enable Code 128◆	1
SS	ISBT Concatenation Off◆	2
SS	ISBT Concatenation On	3
SS	ISBT Concatenation On – Check ISBT table	4
SS	ISBT Concatenation Auto	5
SS	Default (01) ◆	FIN
MS	01-Maximum	(2 digits)
	Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	
SS	Default (98) ◆	FIN
MS	98-Minimum	(2 digits)
	Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	
SS	Level 0	0
SS	Level 1 ◆	1
	SS SS SS MS SS MS	SS Disable Code 128 ← SS Enable Code 128 ← SS ISBT Concatenation Off ← SS ISBT Concatenation On SS ISBT Concatenation On – Check ISBT table ISBT Concatenation Auto SS Default (01) ← 01-Maximum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically. SS Default (98) ← 98-Minimum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically. SS Level 0

Code 128 Setting

ISBT Concatenation Off: The scanner will not output ISBT concatenated barcodes.

ISBT Concatenation On: The scanner will only decode and output ISBT concatenated barcodes. The scanner will not decode or output single ISBT barcodes. ISBT Concatenation On – Check ISBT table: The scanner will only output ISBT concatenated barcodes that conform to ICCBBA standards. The scanner will not output single ISBT barcodes or ISBT concatenated barcodes that do not conform to ICCBBA standards.

ISBT Concatenation Auto: The Scanner will decode and output both ISBT concatenated barcodes and single ISBT barcodes.

■ Code 128 Security Level

The scanner offers two levels of decode security for Code128 bar codes:

Level 0: If you are experiencing misread of poor-printed or out-of-spec. barcode inlevel 1, please select level 0.

Level 1: This is the default setting which allows the scanner to operate fastest, while providing sufficient security in decoding "in-spec." Code128barcodes.

cino



Symbology Reading Control GS1-128 Setting



F_DEFAULT

P.C	Parameter Selection	Option Code
SS SS	Disable GS1-128 Enable GS1-128	0 1
SS MS	Default (01) 01- Maximum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
SS MS	Default (98) 98-Minimum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
\$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$	Disable GS1-128 special function Enable GS1-128 special function Disable First FNC1 transmission ◆ Enable First FNC1 convert to "]C1" and transmission Disable Application Identifier output ◆ Enable Application Identifier output Enable Application Identifier output with additional "()" Disable "DD=00" transmission when AI data field contains the date Enable "DD=00" transmission when AI data field contains the date Disable decimal point insert ◆	0 1 2 3 4 5 6 7 8 9
	\$\$ \$\$ M\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$	SS Default (01) MS Default (01) 01- Maximum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically. SS Default (98) 98-Minimum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically. SS Disable GS1-128 special function ◆ Enable GS1-128 special function SS Disable First FNC1 transmission ◆ Enable First FNC1 convert to "]C1" and transmission SS Disable Application Identifier output ◆ Enable Application Identifier output with additional "()" SS Disable "DD=00" transmission when Al data field contains the date Enable "DD=00" transmission when Al data field contains the date SS Disable decimal point insert ◆

[•] For First FNC1 transmission, chart of the FNC1 is provided in **Appendix-Keyboard Function Code Table**. When the scanner is set to Keyboard Interface, the scanned code is converted to corresponding key function value before it is transmitted.





Symbology Reading Control

GS1-128 Setting (continued)



 $F_DEFAULT$

Family Code Selection	P.C	Parameter Selection	Option Code
GS1-128 FNC1 Setting		None ◆	0
		GS (1DH) User defined character (1~2 characters)	1 2, [GS1-128 ASCII Table][FIN]
GS1-128		None ◆	FIN FINITE IN TAKEN
Element String Separator	MS	User defined character (1~2 characters)	[GS1-128 ASCII Table], [FIN]
GS1-128 Data Separator		None ◆	FIN
	MS	User defined character (1~2 characters)	[GS1-128 ASCII Table], [FIN]
GS1-128 Error Converting		When the conversion from code 128 to GS1 128 is failed, the code 128 is not output ◆	0
		When the conversion from code 128 to GS1 128 is failed, output the code as code 128	1





Symbology Reading Control UK/Plessey Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
UK/Plessey Setting	SS SS SS SS SS SS	Disable UK/Plessey Enable UK/Plessey Select UK/Plessey Standard Format ◆ Select UK/Plessey CLSI Format Disable Convert X to A-F ◆ Enable Convert X to A-F Disable check digit transmission ◆ Enable check digit transmission	0 1 2 3 4 5 6 7
UK/Plessey Min. Length	SS MS	Default (04) ◆ 01-Maximum Scan 2 digits from the option code chart in Appendix, and then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
UK/Plessey Max. Length	SS MS	Default (98) ◆ 98-Minimum Scan 2 digits from the option code chart in Appendix, then FuzzyScan will terminate this selection automatically.	FIN (2 digits)





Symbology Reading Control Telepen Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Telepen Setting	SS SS SS SS SS	Disable Telepen ◆ Enable Telepen Select Telepen Numeric mode ◆ Select Telepen Full ASCII mode Disable check digit transmission ◆ Enable check digit transmission	0 1 2 3 4 5
Telepen Min. Length	SS MS	Default (04) ◆ 01-Maximum Scan 2 digits from the option code chart in Appendix, then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
Telepen Max. Length	SS MS	Default (98) ◆ 98-Minimum Scan 2 digits from the option code chart in Appendix, then FuzzyScan will terminate this selection automatically.	FIN (2 digits)







Symbology Reading Control GS1 DataBar Setting



F_DEFAULT

Family Code Selection GS1 DataBar Setting SS Disable GS1 DataBar (RSS-14) Enable GS1 DataBar (RSS-14) SS Disable GS1 DataBar (RSS-14) Enable GS1 DataBar Limited SS Disable GS1 DataBar Limited Enable GS1 DataBar Limited SS Disable GS1 DataBar Limited SS Disable GS1 DataBar Limited SS Enable GS1 DataBar Expanded SS Evel 1 SS Level 1 SS Level 2 SS Level 3 Only available for GS1 DataBar Limited Only available for F560 scanners. GS1 DataBar Min. Length MS MS Default (04) ◆ 01-Maximum Only available for GS1 DataBar Expanded Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate	Option Code
SS Enable GS1 DataBar Limited SS Disable GS1 DataBar Limited Enable GS1 DataBar Limited SS DisableGS1 DataBar Expanded SS EnableGS1 DataBar Expanded SS EnableGS1 DataBar Expanded SS EnableGS1 DataBar Expanded SS EnableGS1 DataBar Expanded SS Level 1 Level 2 SS Level 3 ◆ Only available for GS1 DataBar Limited Only available for F560 scanners. GS1 DataBar Min. Length MS Default (04) ◆ 01-Maximum Only available for GS1 DataBar Expanded	0
SS Enable GS1 DataBar (RSS-14) ◆ Disable GS1 DataBar Limited Enable GS1 DataBar Limited ◆ DisableGS1 DataBar Expanded EnableGS1 DataBar Expanded EnableGS1 DataBar Expanded ◆ GS1 DataBar Limited SS Level 1 Security Level SS Level 2 SS Level 3 ◆ Only available for GS1 DataBar Limited Only available for F560 scanners. GS1 DataBar Min. Length MS Default (04) ◆ O1-Maximum Only available for GS1 DataBar Expanded	
SS Enable GS1 DataBar Limited ◆ DisableGS1 DataBar Expanded SS EnableGS1 DataBar Expanded ◆ GS1 DataBar Limited SS Level 1 SS Level 2 Level 3 ◆ Only available for GS1 DataBar Limited Only available for F560 scanners. GS1 DataBar Min. Length MS Default (04) ◆ 01-Maximum Only available for GS1 DataBar Expanded	1
SS DisableGS1 DataBar Expanded EnableGS1 DataBar Expanded GS1 DataBar Limited SS Level 1 SS Level 2 SS Level 3 ◆ Only available for GS1 DataBar Limited Only available for F560 scanners. GS1 DataBar Min. Length MS Default (04) ◆ 01-Maximum Only available for GS1 DataBar Expanded	2
SS EnableGS1 DataBar Expanded ◆ GS1 DataBar Limited Security Level SS Level 1 Level 2 Level 3 ◆ Only available for GS1 DataBar Limited Only available for F560 scanners. GS1 DataBar Min. Length MS Default (04) ◆ 01-Maximum Only available for GS1 DataBar Expanded	3
GS1 DataBar Limited Security Level SS Level 2 Level 3 ◆ Only available for GS1 DataBar Limited Only available for F560 scanners. GS1 DataBar Min. Length MS Default (04) ◆ 01-Maximum Only available for GS1 DataBar Expanded	4
Security Level SS Level 2 Level 3 ◆ Only available for GS1 DataBar Limited Only available for F560 scanners. GS1 DataBar Min. Length MS Default (04) ◆ 01-Maximum Only available for GS1 DataBar Expanded	5
SS Level 3 ◆ Only available for GS1 DataBar Limited Only available for F560 scanners. GS1 DataBar Min. Length MS Default (04) ◆ 01-Maximum Only available for GS1 DataBar Expanded	0
Only available for GS1 DataBar Limited Only available for F560 scanners. GS1 DataBar Min. Length MS Default (04) ◆ 01-Maximum Only available for GS1 DataBar Expanded	1
Only available for F560 scanners. GS1 DataBar Min. Length SS MS Default (04) ◆ 01-Maximum Only available for GS1 DataBar Expanded	2
GS1 DataBar Min. Length SS MS Default (04) ◆ 01-Maximum Only available for GS1 DataBar Expanded	
GS1 DataBar Min. Length SS MS Default (04) ◆ 01-Maximum Only available for GS1 DataBar Expanded	
MS 01-Maximum Only available for GS1 DataBar Expanded	FIN
Only available for GS1 DataBar Expanded	
	(2 digits)
■ I II ■ III ■ III ■ Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate	
this selection automatically.	
GS1 DataBar Max. Length SS Default (74) ◆	FIN
MS 74-Minimum	(2 digits)
Only available for GS1 DataBar Expanded. Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	

[■] GS1 128 Limited Security Level

The scanner F560 offers three levels of decode security for GS1 DataBar Limited bar codes:

Level 1:If you failed to read poorly-printed or out-of-spec. bar codes in level 2, please select level 1. This is the most aggressive setting and may increase the misread. Level 2: If you are experiencing misread of poor-printed or out-of-spec. barcode in level 3, please select level 2.

Level 3: This is the default setting which allows the scanner to operate fastest, while providing sufficient security in decoding "in-spec." GS1 128 Limited barcodes.







Symbology Reading Control Composite Codes, Codablock F, PDF417/MicroPDF417 Setting



FΙ	DEF	-Al	JLT

Family Code Selection	P.C	Parameter Selection	Option Code
Composite Codes Setting	SS SS SS	Disable composite codes ◆ Enable composite codes UPC Composite Mode: UPC never linked ◆ UPC Composite Mode: UPC always linked If UPC Composite Mode: UPC never linked is selected, UPC barcodes are transmitted whether MicroPDF417 symbol is detected or not. If UPC Composite Mode: UPC always linked is selected, UPC barcodes are only transmitted when the MicroPDF417 is detected.	0 1 2 3
Codablock F Setting	SS SS	Disable ◆ Enable	0 1
PDF417/MicroPDF417 Setting	SS SS SS SS	Disable PDF417 ← Enable PDF417 ← Disable MicroPDF417 ← Enable MicroPDF417	0 1 2 3





Symbology Reading Control Code 16K & Code 49 Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Code 16K Setting	SS SS	Disable Code 16K ◆ Enable Code 16K	0 1
Code 16K Min. Length	SS MS	Default (01) ◆ 01-Maximum Scan 3 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (3 digits)
Code 16K Max. Length	SS MS	Default (160) ◆ 160-Minimum Scan 3 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (3 digits)
Code 49 Setting	SS SS	Disable Code 49 ◆ Enable Code 49	0 1
Code 49 Min. Length	SS MS	Default (01) ◆ 01-Maximum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
Code 49 Max. Length	SS MS	Default (81) ◆ 81-Minimum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)





Symbology Reading Control (A Series) QR Code Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
QR Code Setting	SS	Disable QR Code	0
	SS	Enable QR Code ◆	1
		Disable MicroQR Code	2
		Enable MicroQR Code ◆	3
		Disable QR Code Append	4
		Enable QR Code Append ◆	5
		Disable QR Code Inverse Reading	6
		Enable QR Code Inverse Reading	7
		Auto detect QR Code Inverse Reading◆	8
		Disable QR Code Mirror Images	9
		Enable QR Code Mirror Images	A
		Auto detect QR Code Mirror Images ◆	В
QR Code Min. Length	SS	Default (01) ◆	FIN
	MS	01-Maximum	(4 digits)
		Scan 4 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	
QR Code Max. Length	SS	Default (7089) ◆	FIN
	MS	7089-Minimum	
		Scan 4 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	(4 digits)

[•] QR Code Inverse Reading: When Enabled, the scanner only read inversed (white on black) QR codes. If Auto detect is selected the scanner can read both normal and inversed QR codes. However, Auto detect might increase decoding time under certain circumstances.

[■] QR Code Mirror Images: When Enabled, the scanner only read mirrored QR and Micro QR codes. If Auto detect is selected the scanner can read both normal and mirrored QR/Micro QR codes. However, Auto detect might increase decoding time under certain circumstances.





Symbology Reading Control (A Series)



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Data Matrix Setting	SS SS SS SS SS SS	Disable Data Matrix Enable Data Matrix ◆ Disable Data Matrix Inverse Reading Enable Data Matrix Inverse Reading Auto Detect Data Matrix Inverse Reading ◆ Disable Data Matrix Mirror Images Enable Data Matrix Mirror Images Auto Detect Data Matrix Mirror Images Auto Detect Data Matrix Mirror Images	0 1 4 5 6 7 8 9
Data Matrix Min. Length	ŜŜ MS	Default (01) ◆ 01-Maximum Scan 4 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (4 digits)
Data Matrix Max. Length	SS MS	Default (3116) ◆ 3116-Minimum Scan 4 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (4 digits)
Damaged DM Code Reading	SS SS SS	Standard ◆ Level 1 Level 2	0 1 2

Data Matrix Inverse Reading: When Enabled, the scanner only read inversed (white on black) Data Matrix. If Auto detect is selected the scanner can read both normal and inversed Data Matrix. However, Auto detect might increase decoding time under certain circumstances.

■ Damaged DM Code Reading:

When using 2D scanner to read damaged DataMatrix codes, you can enable this function to improve the scanner's reading ability. Be aware that the scanner's snappiness decreases when the function is enabled.

[•] Data Matrix Mirror Images: When Enabled, the scanner only read mirrored Data Matrix. If Auto detect is selected the scanner can read both normal and mirrored Data Matrix. However, Auto detect might increase decoding time under certain circumstances.





Symbology Reading Control (A Series)



F_DEFAULT

MaxiCode Setting	g
------------------	---

Family Code Selection	P.C	Parameter Selection	Option Code
MaxiCode Setting	SS	Disable MaxiCode ◆	0
	SS	Enable MaxiCode	1
MaxiCode Min. Length	SS MS	Default (01) ◆ 01-Maximum	FIN (3 digits)
		Scan 3 digits from the option code chart in Appendix, then FuzzyScan will terminate this selection automatically.	
MaxiCode Max. Length	SS MS	Default (150) ◆ 150-Minimum	FIN (2 divide)
	0	Scan 3 digits from the option code chart in Appendix, then FuzzyScan will terminate this selection automatically.	(3 digits)





Symbology Reading Control (A Series)



 $F_DEFAULT$

Aztec	Code	Setting	O
72100	Jour	Octini	9

Family Code Selection	P.C	Parameter Selection	Option Code
Aztec Code Setting	SS SS	Disable Aztec Code Enable Aztec Code ◆	0 1
Aztec Code Min. Length	SS MS	Default (01) ◆ 01-Maximum Scan 4 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (4 digits)
Aztec Code Max. Length	SS MS	Default (3832) ◆ 3832-Minimum Scan 4 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (4 digits)





Symbology Reading Control

Australian Post, US Planet, US Postnet, British Post,& Japan Post Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Australian Post Setting	SS	Disable Australian Post ◆	0
	SS	Enable Australian Post	1
	SS	Raw format Output◆	2
	SS	Numeric Encoding Output (N Encoding Table)	3
	SS	Alphanumeric Encoding Output (C Encoding Table)	4
	SS	Auto-discriminate Output (Combination C & N Encoding Table)	5
US Planet Setting	SS	Disable US Planet ◆	0
	SS	Enable US Planet	1
	SS	Disable Check Digit Transmission ◆	2
	SS	Enable Check Digit Transmission	3
US Postnet Setting	SS	Disable US Postnet ◆	0
	SS	Enable US Postnet	1
	SS	Disable Check Digit Transmission ◆	2
	SS	Enable Check Digit Transmission	3
British Post Setting	SS	Disable British Post ◆	0
	SS	Enable British Post	1
	SS	Disable Check Digit Transmission ◆	2
	SS	Enable Check Digit Transmission	3
Japan Post Setting	SS	Disable Japan Post ◆	0
	SS	Enable Japan Post	1

[•] Australian Post Setting: Auto-discriminate output option increase the risk of misread because the encoded data format does not specify the Encoding Table used for encoding.





Symbology Reading Control Netherlands KIX Code, Intelligent Mail,& Korea Post Code Setting



Family Code Selection	P.C	Parameter Selection	Option Code
Netherlands KIX Code Setting	SS	Disable Netherlands KIX Code ◆	0
	SS	Enable Netherlands KIX Code	1
Intelligent Mail Setting	SS	Disable Intelligent Mail ◆	0
(USPS 4CB/One Code)	SS	Enable Intelligent Mail	1
Korea Post Code Setting	SS	Disable◆	0
	SS	Enable	1
		Length fixed in 6 characters.	





Keyboard Interface Control Keyboard Layout (Language) Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Keyboard Layout	SS	USA (QWERTY) ◆	00
	SS	France (AZERTY)	01
	SS	Germany (QWERTZ)	02
	SS	United Kingdom - UK (QWERTY)	03
	SS	Canadian French (QWERTY)	04
	SS	Spain (Spanish, QWERTY)	05
	SS	Sweden/Finland (QWERTY)	06
	SS	Portugal (QWERTY)	07
	SS	Norway (QWERTY)	08
SS		Spain(Latin America, QWERTY)	09
	SS	Italy (QWERTY)	10
	SS	Netherlands (QWERTY)	11
	SS	Denmark (QWERTY)	12
	SS	Belgium (AZERTY)	13
	SS	Switzerland-Germany (QWERTZ)	14
	SS	Iceland (QWERTY)	15
	SS	Japan (DOS/V)	16
	SS	Czech (QWERTY)	17
	SS	Universal	99

Please refer to the **ASCII/HEX Table** listed in the Appendix to determine HEX codes for characters, symbols, and functions to be used as preamble or postamble. To set preamble or postamble as function key output, you must enable the "**Function Key Emulation**" feature as listed in page 47 first

■ When Universal Keyboard is selected, ASCII 0x20-0x7E characters are sent as sequence of alt key plus numeric keypad value. This is only valid for Windows OS.

■ Keyboard Interface Message String:

Preamble	Data Length	Prefix Symbol ID	Scanned Data	Suffix Symbol ID	Postamble	Record Suffix
1-15 characters	2-4 digits	1 or 3 characters	Variable length	1 or 3 characters	1-15 characters	1 character

cino



Keyboard Interface Control

Record Suffix, Preamble, Postamble, FNC1 Symbol Character Transmission



Family Code Selection	P.C	Parameter Selection	Option Code
Record Suffix	SS	None	0
	SS	RETURN ◆	1
	SS	TAB	2
	SS	SPACE	3
	SS	ENTER (Numeric Key Pad)	4
	SS	User defined character (1 character)	5, (00-7F)
Preamble	SS	None ◆	FIN
	MS	1-15 characters	[00-7F], [FIN]
		Maximum 15-character input; scan "FIN" to terminate this selection.	
Postamble	SS	None ◆	FIN
	MS	1-15 characters	[00-7F], [FIN]
		Maximum 15-character input; scan "FIN" to terminate this selection.	
FNC1 Symbol Char. Transmit	SS	Disable	0
	SS	Enable ◆	1

[•] FNC1 Symbol Char. Transmit: When this function is enabled and the FNC1 is contained in scanned data, the scanner transmits the FNC1 to the host. Chart of theFNC1 is provided in Appendix- Keyboard Function Code Table. When the scanner interface is set to keyboard, the scan code is converted to corresponding key function before it is transmitted.

[■] The function of "Caps Lock Control" and "Key Pad Emulation" are only available for IBM PC/AT, PS/VP, PS/2 series personal computers and compatible machines. While selecting the other host interfaces, these selections don't perform the above functions for you.





Keyboard Interface Control Caps Lock & Caps Lock Release Control



Family Code Selection	P.C	Parameter Selection	Option Code
Caps Lock Control	SS SS SS	"Caps Lock Off" State ◆ "Caps Lock On" State Auto Detect (PC/AT, PS/2, Keyboard Replacement and DOS/V Machines only)	0 1 2
Caps Lock Release Control	SS SS	"Caps Lock On, Caps Off" ◆ "Caps Lock On, Shift Off"	0 1

- The function of "Caps Lock Control" is only available for IBM PC/AT, PS/VP, PS/2 series personal computers and compatible machines. While selecting the other host interfaces, these selections don't perform the above functions for you.
- Please check the actual Caps Lock state in use while software application is running. If the Caps Lock state is off, select "Caps Lock Off" state, and then FuzzyScan will perform normal data transmission. If the Caps Lock state is on, select "Caps Lock On" state. Select "Auto Detect", FuzzyScan will perform special transmission handshaking without changing the status of Caps Lock switch.





Keyboard Interface Control Delay Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Intermessage Delay	SS MS	None ◆ 1-99 (x5) msec. Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
Intercharacter Delay	SS MS	None ◆ 1-99 (x5) msec. Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
Interfunction Delay	SS MS	None ◆ 1-99 (x5) msec. Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)

- Intermessage Delay is a time delay between messages output by FuzzyScan. Increasing this delay will help host applications process the incoming data on time.
- Intercharacter Delay is a time delay between data characters output by FuzzyScan. These two parameters are used to synchronize data communication when: 1) the data transmission speed is too fast, characters may be skipped; 2) multitasking operation system or host computers in a network may slow down the keyboard handling; 3) various notebook or desktop PC systems require different timing parameter settings. Please always add one extra unit as safety margin when adjusting these two parameters.
- Interfunction Delay is a time delay of transmission of segments in each message string.





Keyboard Interface Control

Function Key &Key Pad Emulation, Upper/Lower Case Setting, Dollar Sign Control



Family Code Selection	P.C	Parameter Selection	Option Code
Function Key Emulation	SS SS SS	Enable Keyboard Function Code Table 1 Output ◆ Enable Keyboard Function Code Table 2 Output (Ctrl-Output) Enable Keyboard Function Code Table 3 Output Refer to Appendix – Keyboard Function Code Table for details. Keyboard Function Code Table 3 is only supported by A Series & PA Series.	0 1 2
Key Pad Emulation	SS SS	Disable key pad emulation ◆ Enable numeric output as key pad (Num Lock On) output	0 1
Upper/Lower Case	SS SS SS	Normal case (neglect the upper/lower case control) ◆ Inverse case (change all characters output to inverse case) Upper case (force all characters output as upper case) Lower case (force all characters output as lower case)	0 1 2 3
Dollar Sign Control	SS SS SS SS	Dollar sign output as "\$ "◆ Dollar sign output as "¥" Dollar sign output as "€" Dollar sign output as "£" Dollar sign output as "¢"	0 1 2 3 4

[■] The function of "**Key Pad Emulation**" is **only** available for IBM PC/AT, PS/VP, PS/2 series personal computers and compatible machines. While selecting the other host interfaces, these selections don't perform the above functions for you.







Keyboard Interface Control

Code Page: Barcode Encoding Format, Keyboard Output



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Barcode Encoding Format	MS	UTF8	00
		Codepage 950	10
		Codepage 949	11
		Codepage 936	12
		Codepage 932	13
		Codepage 874	14
		WIN1250	15
		WIN1251	16
		WIN1252◆	17
		WIN1253	18
		WIN1254	19
		WIN1255	1a
		WIN1256	1b
		WIN1257	1c
		WIN1258	1d
		ISO 8859-1 Latin 1, Western European	1e
		ISO 8859-2 Latin 2, Central European	1f
		ISO 8859-3 Latin 3, Southern European	20
		ISO 8859-4 Latin 4, Northern European	21
		ISO 8859-5 Cyrillic	22
		ISO 8859-6 Arabic	23
		ISO 8859-7 Greek	24
		ISO 8859-8 Hebrew	25
		ISO 8859-9 Latin 5, Turkish	26
		ISO 8859-10 Latin 6, Nordic	27
		ISO 8859-11 Thai	28
		ISO 8859-13 Latin 7, Baltic	29



FuzzyScan Programming Manual

		ISO 8859-14 Latin 8, Celtic	2a
		ISO 8859-15 Latin 9	2b
		ISO 8859-16 Latin 10, South-Eastern European	2c
	MS	Linux Unicode Output	00
Keyboard Output		MAC Unicode Output	01
		WIN Notepad Unicode Output	02
		WIN Wordpad Unicode Output	03
		Codepage 950 Output	10
		Codepage 949 Output	11
		Codepage 936 Output	12
		Codepage 932 Output	13
		Codepage 874 Output	14
		WIN1250 Output	15
		WIN1250 Output	16
		WIN1251 Output◆	17
		WIN1253 Output	18
		WIN1254 Output	19
		Codepage 852 Output	30
		Codepage 855 Output	31
		Codepage 866 Output	32
		Codepage 850 Output	33
		Codepage 437 Output	34
		Codepage 737 Output	35
		Codepage 857 Output	36
		Codepage 862 Output	37
		Codepage 720 Output	38
		Codepage 775 Output	39
		WIN1255 Output	1a
		WIN1256 Output	1b
		WIN1257 Output	1c
		WIN1258 Output	1d
		·	



- Corresponding Languages: Please see Appendix below, "Code Page Table of Corresponding Languages".
- Barcode Encoding Format: 2D barcodes can be encoded using different code pages. To properly decode the data of a 2D barcode, the scanner must first be set to the corresponding code page of such data. Select UTF8 if the 2D barcode was encoded in Unicode (UTF-8).
- **Keyboard Output:** Different languages use different code pages. For your scanner to properly display the content of a2D barcode, select the codepage that corresponds to the content's language. Please check your system locale setting in Windows and make sure that it also matches this language.
- 1) Mac Device Output: If your host is a Mac device, select "MAC Unicode Output" as the scanner's output setting (the data will be in Unicode). You must also first ensure that your Mac device has the required Unicode Hex Input Setup and is configured for the 16-bit input method. Please see Appendix below, "Code Page Unicode Hex Input Setup".
- 2) WIN Notepad Unicode Output: If your host is a Windows device, you can output the data in Unicode format to Notepad. You must first ensure that your Windows device has the required Unicode Hex Input Setup, and is set to the US English input method. Please see Appendix below, "Code Page Unicode Hex Input Setup".
- 3) WIN WordPad Unicode Output: If your host is a Windows device, you can output the data in Unicode format to WordPad. You must first ensure that your Windows device is set to the US English input method.





Serial Interface Control



PROGRAM

STX/ETX Control, Record Suffix, Preamble, Postamble, FNC1 Symbol Char. Transmission

F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
STX/ETX Control	SS SS	Disable STX/ETX transmission ◆ Enable STX/ETX transmission STX/ETX are two characters used to indicate the starting and ending of the total data frame transmitted via serial interface.	0 1
Record Suffix	\$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$	None CR (0DH) ◆ LF (0AH) CRLF (0D0AH) TAB (09H) SPACE (20H) User defined character (1 character)	0 1 2 3 4 5 6, (00-7F)
Preamble	SS MS	None ◆ 1-15 characters Maximum 15-character input; scan "FIN" to terminate this selection.	FIN [00-7F], [FIN]
Postamble	SS MS	None ◆ 1-15 characters Maximum 15-character input; scan "FIN" to terminate this selection.	FIN [00-7F], [FIN]

■ Serial Interface Message String (RS232, USB COM) :

STX	Preamble	Data Length	Prefix Symbol ID	Scanned Data	Suffix Symbol ID	Postamble	ETX	Record Suffix
1 character	1-15 characters	2-4 digits	1 or 3 characters	Variable length	1 or 3 characters	1-15 characters	1 character	1 character





Serial Interface Control FNC1 Symbol Char. Transmission



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
FNC1 Symbol Char. Transmit	SS SS	Disable Enable ◆	0 1
		When this function is enabled and the FNC1 is contained in scanned data, the scanner transmits the FNC1 to the host. Chart of the FNC1 is provided in Appendix–Keyboard Function Code Table. When the scanner interface is set to keyboard, the scan code is converted to corresponding key function before it is transmitted	





Serial Interface Control Delay Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Intermessage Delay	SS MS	None ◆ 1-99 (x5) msec. Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
Intercharacter Delay	SS MS	None ◆ 1-99 (x5) msec. Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
Interfunction Delay	SS MS	None ◆ 1-99 (x5) msec. Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)

- Intermessage Delay is a time delay between messages output by FuzzyScan. Increasing this delay will help host applications process the incoming data on time.
- Intercharacter Delay is a time delay between data characters output by FuzzyScan. These two parameters are used to synchronize data communication when: 1) the data transmission speed is too fast, characters may be skipped; 2) multitasking operation system or host computers in a network may slow down the keyboard handling; 3) various notebook or desktop PC systems require different timing parameter settings. Please always add one extra unit as safety margin when adjusting these two parameters.
- Interfunction Delay is a time delay between transmission and reception of each segment of the message string.





Serial Interface Control Protocol, ACK/NAK Setting



F DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Handshaking Protocol	SS SS SS	None (free running mode) ◆ RTS/CTS (hardware handshaking) ACK/NAK (software handshaking) Xon/Xoff (software handshaking)	0 1 2 3
NAK Retry Count	SS SS	3 times ◆ 0~255 times	FIN (3 digits)
ACK Indication	SS SS SS SS	Disable ACK Time-out Indication Enable ACK Time-out Indication ◆ Disable ACK Indication ◆ Enable ACK Indication	0 1 2 3

- USB COM doesn't support RTS/CTS handshaking protocol.
- When the ACK/NAK Software Handshaking option is selected, the FuzzyScan waits for an ACK (acknowledge) or NAK (not acknowledge) from the host computer after each data transmission. If the NAK is received, FuzzyScan will re-send the data until receiving ACK.'

■ NAK Retry Count

After transmitting data, the scanner expects a NAK response from the host up to the preset "Serial Response Time-out". If the scanner doesn't get a response, the scanner will issue an error indication and discard the data. When a NAK is received, the scanner transmits the same data again and waits for either an ACK or NAK. The scanner issues an error indication and discards the data under following two conditions:

- 1) After preset NAK retry counts is received within the preset serial response time-out.
- 2) If the preset time-out is up but the preset NAK retry counts haven't come to the end.

The default retry counts are three times. If you program "0 time", the scanner won't resend the data to the host when the scanner receives a NAK. The scanner will discard the data. If you program "255 times", the scanner can receive unlimited NAKs from the host within the pre-set serial response time-out.

This function is not available for batch mode. When you enable this function in on-line mode, the out-of-range function will be disable automatically.

ACK Indication:

Disable: There's neither LED nor beeping indication for this setting. Enable: There's a specific LED and beeping indication for this setting.





Serial Interface Control

Response Time-out Setting, Baud Rate, Data Frame



F DEFAULT

Family Code Selection	P.C	Parameter	Selection	Optior	n Code
Serial Response Time-out	SS	None	3 seconds	0	6
	SS	200 mseconds	4 seconds	1	7
	SS	500 mseconds ◆	5 seconds	2	8
	SS	800 mseconds	8 seconds	3	9
	SS	1 second	10 seconds	4	Α
	SS	2 seconds	15 seconds	5	В
Baud Rate (BPS)	SS	38.4K BPS	2400 BPS	0	4
	SS	19.2K BPS	1200 BPS	1	5
	SS	9600 BPS ◆	57.6K BPS	2	8
	SS	4800 BPS	115.2K BPS	3	9
Data Frame	SS	8, None, 1 ◆	7, Space, 1	0	8
	SS	8, Odd, 1	7, Mark, 1	1	9
	SS	8, Even, 1	7, None, 2	2	Α
	SS	8, Space, 1	7, Odd, 2	3	В
	SS	8, Mark, 1	7, Even, 2	4	С
	SS	8, None, 2	7, Space, 2	5	D
	SS	7, Odd, 1	7, Mark, 2	6	Е
	SS	7, Even, 1		7	

[•] When the RTS/CTS Hardware Handshaking option is selected, the RTS (request to send) and CTS (clear to send) signals will be issued before normal data communication. This option is very helpful to ensure the reliability of data communication.

[■] The Serial Response Time-out is a pre-defined delay time for FuzzyScan to wait for handshaking, acknowledgment or non-acknowledgment from the host computer





Serial Interface Control

Code Page: Barcode Encoding Format, Serial Port Output (A& PA Series Only)



F_DEFAULT

Scharr Sit Sutput (Mar / M Solies Siny)					
Family Code Selection	P.C	Parameter Selection	Option Code		
Barcode Encoding Format		UTF8	00		
		Code page 950	10		
		Code page 949	11		
		Code page 936	12		
		Code page 932	13		
		Code page 874	14		
		WIN1250	15		
		WIN1251	16		
		WIN1252 ◆	17		
		WIN1253	18		
		WIN1254	19		
		WIN1255	1a		
	MS	WIN1256	1b		
		WIN1257	1c		
		WIN1258	1d		
		ISO 8859-1 Latin 1, Western European	1e		
		ISO 8859-2 Latin 2, Central European	1f		
		ISO 8859-3 Latin 3, Southern European	20		
		ISO 8859-4 Latin 4, Northern European	21		
		ISO 8859-5 Cyrillic	22		
		ISO 8859-6 Arabic	23		
		ISO 8859-7 Greek	24		
		ISO 8859-8 Hebrew	25		
		ISO 8859-9 Latin 5, Turkish	26		
		ISO 8859-10 Latin 6, Nordic	27		
		ISO 8859-11 Thai	28		
		ISO 8859-13 Latin 7, Baltic	29		
		ISO 8859-14 Latin 8, Celtic	2a		

cino

		ISO 8859-15 Latin 9	2b
		ISO 8859-16 Latin 10, South-Eastern European	2c
Serial Port Output		Raw Data ◆	00
		Unicode (Big Endian)	01
		Unicode (Little Endian)	02
		UTF8	03
		CP950 Output (Big Endian)	10
		CP949 Output (Big Endian)	11
		CP936 Output (Big Endian)	12
		CP932 Output (Big Endian)	13
		CP874 Output	14
		WIN1250 Output	15
		WIN1251 Output	16
		WIN1252 Output	17
		WIN1253 Output	18
		WIN1254 Output	19
		WIN1255 Output	1A
	MS	WIN1256 Output	1B
	IVIO	WIN1257 Output	1C
		WIN1258 Output	1D
		CP852	30
		CP855	31
		CP866	32
		CP850	33
		CP437	34
		CP737	35
		CP857	36
		CP862	37
		CP720	38
		CP775	39
		CP950 Output (Little Endian)	90
		CP949 Output (Little Endian)	91
		CP936 Output (Little Endian)	92
		CP932 Output (Little Endian)	93

[■] To get multilingual output with the serial interface, please choose correct barcode encoding format and its corresponding serial port output format.





Wand/Laser Emulation Control (F & L Series)



F_DEFAULT

Output Polarity, Signal State, Narrow/Wide Ratio, Margin & Module Time

Family Code Selection	P.C	Parameter Selection	Option Code
Output Polarity	SS	High level (5Vdc) on Bar (low level on Space) ◆	0
	SS	Low level (0Vdc) on Bar (high level on Space)	1
		Determine the output voltage level for both bar and space.	
InitialSignalState	SS	High Level (5Vdc) ◆	0
	SS	Low Level (0Vdc)	1
		Determine the initial state of output voltage level.	
Margin Time	SS	10 msec.	0
	SS	15 msec.	1
	SS	20 msec. ◆	2
	SS	25 msec.	3
	SS	30 msec.	4
Module Time	SS	Extremely short	0
	SS	Short	1
	SS	Medium ◆	2
	SS	Long	3
Narrow/Wide Ratio	SS	1:2 ◆	0
	SS	1:2.5	1
	SS	1:3	2





Wand/Laser Emulation Control (F & L Series) Code 39/Code 128 Emulation



Family Code Selection	P.C	Parameter Selection	Option Code
Code 39/Code 128 Emulation	SS SS SS SS	Disable standard Code 39 emulation ◆ Enable standard Code 39 skip emulation Enable standard Code 39 replace emulation Enable Full ASCII Code 39 emulation Enable Code 128 emulation	0 1 2 3 4

[■] Code 39 Skip: When this option is selected, all scanned data will be translated as Standard Code 39 wand/laser emulation output. If any lower case characters are read, they will be translated to upper case characters. Any other characters that are not available in Code 39 symbology set will be skipped.

[■] Code 39 Replace: Any character not normally available in the standard Code 39 symbology set, will be translated as Space.







Operation Control (F & L Series) Operation Mode



F	D	E	FΑ	١U	Ľ	T

Family Code Selection	P.C	Parameter Selection	Option Code
Operation Mode	SS	Low Power mode	0
	SS	Trigger mode ◆	1
	SS	Presentation mode	2
	SS	Alternative mode	3
	SS	Flash mode	4
	SS	Force mode	5
	SS	Toggle mode	6
	SS	Diagnostic mode	7
	SS	Level mode	8
	SS	Multiple Read mode	С

- **Low Power Mode (Low Power Triggering):** The scanner goes into idle state after scanning the barcode. You must press the trigger to wake up the scanner for operation.
- Trigger Mode (External Triggering): The scanner goes into standby state after scanning the barcode. You must press the trigger to turn on the light source of the scanner before scanning the barcode.
- Presentation Mode (Auto Detection): Presentation mode uses ambient light to detect the barcodes. The light source is off until the scanner detects an image which is similar to a barcode. Then the light source turns on automatically to read the barcode. If the light level in the room is not high enough, Presentation Mode may not work properly. You can choose different level of "Presentation Sensitivity" to meet your application (Please refer to the setting of "Presentation Sensitivity").
- Alternative Mode (Periodic Power Off): The scanner keeps its light source on till the pre-defined Light Source On Time is up. After the scanner turns off its light source, you must press the trigger to turn on the light source again. After each good read, the timer of "Light Source On Time" is reset. It's very convenient because for multiple scans you only need to press the trigger once.
- Flash Mode (Pulse Driven Reading): The scanner automatically flashes its light source at low frequency without triggering. If the scanner detects an image which is similar to a barcode, it forces on its light source automatically and scans the barcode. Use Flash Duty Cycle to adjust the frequency of the blinking.
- Force Mode (Continued Power On): The scanner always turns on its light source for continuous operation without triggering. This mode is convenient for high speed barcode reading.
- Toggle Mode (Repeat Reading): Under toggle mode the light source of the scanner keeps on when the trigger is pulled once. With its light source on the scanner read a barcode immediately when it "sees" the barcode. The scanner keeps its light source on until the trigger is pulled again.
- Diagnostic Mode (Test Reading): This operation mode is specifically designed for diagnostic purposes. When this operation mode is selected, its light source is forced on regardless of other programmable parameters, such as Reread Delay, Redundancy, and so forth.
- Level Mode (Auto Power Off): When this operation mode is selected, the scanner continues to turn its light source on before it has a good read or a pre-defined "Light Source On Time" is due. If the scanner decodes a barcode successfully, it turns off its light source immediately. After the scanner turns off its light source, you must press the trigger again to turn on its light source. If the scanner detects no barcodes or fails to have a good read during the pre-defined Light Source On Time, the scanner enters the idle state when time is up.



- Multiple Read Mode: The scanner is allowed to decode multiple barcodes with a single pull of the trigger. When you press and hold the trigger to aim at a series of barcodes, the scanner will decode each barcode and beep for each good read. You can enable Unique Barcode Reporting function to avoid reading the same code multiple times in a same scanning session.
 - FuzzyScan Laser model only have LED illumination (without laser aiming line) in Flash/ Force/Toggle/ Diagnostics Modes.





Operation Control (F & L Series)



F_DEFAULT

Presentation Control, Scan Rate, Flash Duty, SmartStand Power off Timeout

Family Code Selection	P.C	Parameter Selection	Option Code
Presentation Control	SS SS SS	Presentation mode ◆ Flash mode Force mode	0 1 2
Scan Rate Control	SS SS	Dynamic ◆ Fixed	0 1
Flash Duty Cycle	SS SS SS	1/2 duty cycle ◆ 2/3 duty cycle 3/4 duty cycle 4/5 duty cycle L680/L780 laser imagers don't support this function.	0 1 2 3
SmartStand Power Off Timeout	SS SS SS	3 mins ◆ 5 mins 10 mins Only available for FuzzyScan Laser model	0 1 2

[■] Presentation Control: When the scanner is placed on SmartStand, the scanner will be switched from hand-held scanning to hands free scanning automatically. Three hands scanning modes are available. You are recommended to use flash mode or force mode while under insufficient ambient light.

[•] Scan Rate Control: The scanner will have better motion tolerance when you select "Fixed" scan rate. It's suitable for application which needs higher motion tolerance on the move. But this may impact to the reading distance.

The Flash Duty Cycle is designed to control the flashing frequency of the light source.

[■] The **SmartStand Power Off Timeout** is a pre-defined duration for scanner's light source on time when the scanner is placed on SmartStand. While the scanner is placed on SmartStand, the scanning-type will be switched from hand-held scanning to presentation scanning and the light source will be forced on automatically. The light source will be off when the pre-defined duration is up.







F DEFAULT

LED Illumination Control, Illumination Delay

Family Code Selection	P.C	Parameter Selection	Option Code
LED Illumination Control	SS	Always on	0
	SS	Intelligent Mode ◆	
LED Illumination Delay	SS SS SS SS SS	100 ms 150 ms ◆ 200 ms 250 ms 300 ms	0 1 2 3 4

[■] LED Illumination Control: When you enable "always on", the LED illumination will be always on when you press the trigger. When you enable "intelligent mode", the scanner will emit the laser aiming line first, the LED illumination will be turned on after the preset LED illumination delay. Intelligent mode is recommended to be used in regular ambient light environment.





Operation Control (F & L Series)



F_DEFAULT

Laser Aiming Control, 1D Barcode Reading Direction

Family Code Selection	P.C	Parameter Selection	Option Code
Laser Aiming Control	SS SS	Disable Enable ◆ Only available for <i>L Series</i> .	0 1
1D Barcode Forward-reading Indication	SS SS MS	None ◆ "S" User defined character(1 character)	0 1 2 (00-7F)
1D Barcode Backward-reading Indication	SS SS MS	None "X" User defined character(1 character)	0 1 2 (00-7F)
1D Barcode Direction Indication Transmission	SS SS SS SS	Disable ◆ Enable prefix direction mark transmission Enable suffix direction mark transmission Enable both prefix and suffix direction mark transmission	0 1 2 3

[■] Laser Aiming Control: You can disable or enable laser aiming line when you scan PDF barcode.







Operation Mode, Presentation & Illumination Control

Family Code Selection	P.C	Parameter Selection	Option Code
Operation Mode	SS	Low Power mode (Low power triggering)	0
	SS	Trigger mode (External triggering) ◆	1
	SS	Presentation mode (Auto detection)	2
	SS	Alternative mode (Periodic power off)	3
	SS	Force mode (Continued power on)	4
	SS	Toggle mode (Repeat reading)	5
	SS	Diagnostic mode (Test reading)	6
	SS	Level mode (Auto power off)	7
	SS	Multiple Read Mode	8
Presentation Control	SS	Presentation mode ◆	0
	SS	Force mode	1
Illumination Control	SS	Disable	0
	SS	Enable ◆	1
Presentation Background Lighting	SS	LEDs Off	0
	SS	LEDs On◆	1

Low Power Mode (Low Power Triggering): The scanner goes into idle state after scanning the barcode. You must press the trigger to wake up the scanner for operation.

[•] Trigger Mode (External Triggering): The scanner goes into standby state after scanning the barcode. You must press the trigger to turn on the light source of the scanner before scanning the barcode.



- Presentation Mode (Auto Detection): Presentation mode uses ambient light to detect the barcodes. The light source is off until the scanner detects an image which is similar to a barcode. Then the light source turns on automatically to read the barcode. If the light level in the room is not high enough, Presentation Mode may not work properly. You can choose different level of "Presentation Sensitivity" to meet your application (Please refer to the setting of "Presentation Sensitivity").
- Alternative Mode (Periodic Power Off): The scanner keeps its light source on till the pre-defined Light Source On Time is up. After the scanner turns off its light source, you must press the trigger to turn on the light source again. After each good read, the timer of "Light Source On Time" is reset. It's very convenient because for multiple scans you only need to press the trigger once.
- Force Mode (Continued Power On): The scanner always turns on its light source for continuous operation without triggering. This mode is convenient for high speed barcode reading.
- Toggle Mode (Repeat Reading): Under toggle mode the light source of the scanner keeps on when the trigger is pulled once. With its light source on the scanner read a barcode immediately when it "sees" the barcode. The scanner keeps its light source on until the trigger is pulled again.
- Diagnostic Mode (Test Reading): This operation mode is specifically designed for diagnostic purposes. When this operation mode is selected, its light source is forced on regardless of other programmable parameters, such as Reread Delay, Redundancy, and so forth.
- Level Mode (Auto Power Off): When this operation mode is selected, the scanner continues to turn its light source on before it has a good read or a pre-defined "Light Source On Time" is due. If the scanner decodes a barcode successfully, it turns off its light source immediately. After the scanner turns off its light source, you must press the trigger again to turn on its light source. If the scanner detects no barcodes or fails to have a good read during the pre-defined Light Source On Time, the scanner enters the idle state when time is up.
- Multiple Read Mode: The scanner is allowed to decode multiple barcodes with a single pull of the trigger. When you press and hold the trigger to aim at a series of barcodes, the scanner will decode each barcode and beep for each good read. For more precise barcode decoding, you are recommended to enable Center Alignment function while multiple read mode is selected. You can enable Unique Barcode Reporting function to avoid reading the same code multiple times in a same scanning session.
- Operation modes categorized as "Hand-Held Mode": Low power mode, Trigger mode, Alternative mode, Toggle mode, Level mode, Multiple read mode
- Operation modes categorized as "Hand-Free Mode": Presentation mode, Force mode,
- The Illumination Control is only available for hand-held modes.
- Presentation Background Lighting Control: You can enable or disable presentation background lighting of the scanner under presentation mode according to the ambient light condition. When the ambient light is dim or dark, enabling this is helpful for motion sensing ability of the scanner.







F_DEFAULT

Aiming Control, Pre Decode Aiming Timer, Decode Aiming Control

Family Code Selection	P.C	Parameter Selection	Option Code
Aiming Control	SS	Regular Aiming	0
	SS	Intelligent Aiming ◆	1
	SS	Pre-decode Aiming Control	2
Pre Decode Aiming Timer	SS	200 ms	0
	SS	400 ms ◆	1
	SS	800 ms	2
	SS	1 sec	3
	SS	1.5 sec.	4
	SS	2 sec.	5
	SS	3 sec.	6
	SS	4 sec.	7
Decode Aiming Control	SS	Disable in Hand-Held mode	0
	SS	Enable in Hand-Held mode ◆	1
	SS	Disable in Hand-Free mode	2
	SS	Enable in Hand-Free mode ◆	3

- The Aiming Control is available for Trigger mode and Multiple Read Mode.
- Under Regular Aiming, the aiming light is turned on only when the trigger button is pressed.
- Under Intelligent Aiming, the aiming light is turned on when the scanner is lifted or detects incoming object. A trigger button press activates decoding process. After 2 seconds of inactivity, the aiming light will be shut off automatically.
- Pre-decode Aiming Control provides a time duration for the user to aim the target barcode before the scanner starts to decode. When the user presses and holds the trigger button, the aiming light will be on but the main light source won't until the timer runs out. When the timer runs out, the scanner will turn on its main light source and start to find a barcode to decode. The time duration between the pressed trigger and the start of the scan session can be adjusted by setting Pre-Decode Aiming. The Pre-decode Aiming can help the user to avoid a misreading if the user needs to read a specific barcode when there are other barcodes within close range.
- The Pre-decode Aiming Timer is only effective under Trigger Mode and Multiple Read Mode.



- Use Decode Aiming Control to turn on or turn off the aiming light during the scan session:
- Under Handheld mode, enable/disable Decode Aiming Control to turn on/off the aiming light when the trigger is pressed.
- Under Hands-free mode, enable/disable Decode Aiming Control to turn on/off the aiming light when the scanner detects an object and starts a scan session.





F_DEFAULT

Center Alignment, Unique Barcode Reporting

Family Code Selection	P.C	Parameter Selection	Option Code
Center Alignment	SS SS SS	Disable in Hand-Held Mode ◆ Enable in Hand-Held Mode Disable in Hand-Free Mode ◆ Enable in Hand-free Mode	0 1 2 3
Unique Barcode Reporting	SS SS	Disable ◆ Enable	0 1

- Center Alignment: When this function is enabled, the scanner only decodes barcode(s)around aiming line.
- Unique Barcode Reporting: When this function is enabled, the scanner will only output data from each barcode once during a scanning cycle (the time duration when the trigger key is pressed and held without release). This prevents the output of repeat data in case a barcode is accidentally read multiple times during the same scanning cycle. For Multiple Read mode only.







Operation Control (A Series) Smart Scene



 ${\sf F_DEFAULT}$

Family Code Selection	P.C	Parameter Selection	Option Code
Smart Scene	SS	Scene 1◆	0
	SS	Scene2	1
	SS	Scene 3	2
	SS	Scene 4	3
	SS	Scene 5	4
	SS	Scene 6	5
	SS	Scene 7	6

- Smart Scene optimizes the scanner's motion tolerance, scanning speed and scanning sensitivity in different environments.
- Scene 1: This is the default setting. It optimizes the scanner's motion tolerance, scanning speed and scanning sensitivity in most working environments.
- Scene 2: The scanner is optimized for scanning high-density barcodes.
- Scene 3: This setting is for general retail applications.
- Scene 4: Another setting also optimized for general retail applications, as well as the performance when scanning barcodes displayed on the screens of devices, especially those with large LCD or with low brightness.
- Scene 5: An application-specific mode optimizes the scanner for scanning low PCS (print contrast) barcodes on circuit boards.
- Scene 6: An application-specific mode optimizes the scanner for scanning barcodes on circuit boards with sufficient ambient light.
- Scene 7: An application-specific mode optimizes the scanner for scanning barcodes from the mobile device screens.









F_DEFAULT

Batch Reading

Family Code Selection	P.C	Parameter Selection	Option Code
Batch Reading	SS	None◆ Batch Reading rule input (01-16 rules)	[FIN] [Rules] [FIN]

- Batch Reading: When this function is enabled, you can scan multiple barcodes one by one continuously upon one trigger event. The scanner reports a good read beep and indication only if all bar codes set by the "Batch Reading Rule" are read. Otherwise, the scanner reports an error beep and indication. The scanned data will be transmitted according to the preset sequence which is defined in "Batch Reading Rule" regardless the scanned order of those barcodes.
 - Batch Reading function is only available Trigger Mode.
- Batch Reading is not available when Multiple Read Mode or Center Alignment is turned on.

■ Batch Reading Rule:

- To set the Batch Reading rule
 - 1.Scan the **PROGRAM** symbol.
 - 2.Scan the Batch Reading symbol (Family Code).
 - 3. Use the **Option Code** to define the preset Batch Reading rule.
 - 4.Scan the **FIN** symbol.
 - 5. Scan the **END** symbol to save your Batch Reading rule.

Note: Scan the ABORT and END symbol to exit without saving any Batch Reading rule setting.

- When you scan "None", the preset Batch Reading Rule will be cancelled.
- Batch Reading Rule Syntax:

[n] [Element 1] FF [Element 2] FF [Element 3] FF ... [Element n] FF

Where **n** is the number of elements in the overall rule. The number of elements is up to 16.**FF** indicates the end of one element.

- Element structure:

[Cino ID Hex value] [Code length] [Character match(es)]

Where:

• [Cino ID Hex value]

Length: 2 byte

Please find Cino ID hex value from **Symbology ID Table**in appendix. Locate the Hex value for the symbology and scan the 2 digit hex values from the **Option Code**.

Note: 99 is the universal number, indicating all symbologies.



• [Code length]

Length: 4 byte

Specify what length of data output will be acceptable for this symbology. When you calculate the length, you must consider the whole data string which includes the programmed Preamble, Postamble, Scanned Data Length, Prefix/Suffix Symbol ID or AIM ID. Scan the four digit data length from the **Option Code**. Note: 40 characters is entered as 0040; 9999 is a universal number, indicating all lengths.

• [Character match]

Length: 2-8 byte

You can refer to **HEX/ASCII Reference Table** to find the Hex value that represents the character(s) you want to match. Use the **Option Code** to scan the alphanumeric combination that represents the ASCII characters. You can match up to 4 characters which are counted from the start character of the whole **Data String**.

Note: When setting the matched character(s), you must match the content of the whole Data String, including the programmed Preamble, Postamble, Scanned Data Length, Prefix/Suffix Symbol ID OR AIM ID if you had defined. **FF** is the universal character, indicating all characters.

- Batch Reading rule example

In this example, you are scanning Code 39, Code 128, and Code 93 bar codes, but you would like to output the data in following sequence: Code 128 - Code 39 - Code 93



B-CODE39



A-CODE128



C-CODE93





You would set up the Batch Reading rule with the following command line:

[PROGRAM] [Batch Reading] [0301999941FF079999942FF09999943FF] [FIN] [END]

The breakdown of the command line is shown below:

03	The number of elements in the overall rule
01	Code identifier of Code 128
9999	Code length that must match for Code 128, 9999 = all lengths
41	Start character match for Code 128, 41h = "A"
FF	End of first code
07	Code identifier of Code 39
9999	Code length that must match for Code 39, 9999 = all lengths
42	Start character that must match for Code 39, 42h = "B"
FF	End of second code
09	Code identifier of Code 93
9999	Code length that must match for Code 93, 9999 = all lengths
43	Start character match for Code 93, 43h = "C"
FF	End of third code

To program the previous example using specific lengths, you would have to count the programmed Preamble, Postamble, Scanned Data Length, Prefix/Suffix Symbol ID OR AIM ID if you had defined as part of the length. If you enable the Suffix Symbol ID of symbology, you would add one character to the previous example's length.

You would set up the Batch Reading rule with the following command line:

[PROGRAM] [Batch Reading] [0301001041FF070009FF09000943FF] [FIN] [END]



The breakdown of the command line is shown below:

03	The number of elements in the overall rule
01	Code identifier of Code 128
0010	Code length that must match for Code 128 A-CODE128 sample length (9) plus Suffix Symbol ID (1) = 10
41	Start character match for Code 128, 41h = "A"
FF	End of first code
07	Code identifier of Code 39
0009	Code length that must match for Code 39 B-CODE39 sample length (8) plus Suffix Symbol ID (1) = 9
FF	Universal matched character, indicating all character Also indicate end of second code
09	Code identifier of Code 93
0009	Code length that must match for Code 93 C-CODE93 sample length (8) plus Suffix Symbol ID (1) = 9
43	Start character match for Code 93, 43h = "C"
FF	End of third code

Note: If the [Character match (es)] is set to "FF", the following "FF" which indicated the end of the code was not need to set.

- Structure of Data String

STX (RS232/USB COM	Preamble	Scanned Data Length	Prefix Symbol ID Or	Scanned Data modified by DataWizard	Suffix Symbol ID Or	Postamble	ETX (RS232/USB COM
interface)			Prefix AIM Symbol ID		Suffix AIM Symbol ID		interface)
1 character	1-15 characters	2-4 digits	1 or 3 characters	Variable length	1 or 3 characters	1-15 characters	1 character







 $F_DEFAULT$

Buzzer Tone Adjust, Power On & Good Read Indicator, Vibrator Control

Family Code Selection	P.C	Parameter Selection	Option Code
Buzzer Tone Adjust	SS	Buzzer tone – mute	0
	SS	Buzzer tone – low (Frequency 1.20 kHz)	1
	SS	Buzzer tone – medium(Frequency 2.70 kHz)◆	2
	SS	Buzzer tone – high (Frequency 2.81 kHz)	3
	SS	Buzzer tone - extremely high (Frequency 2.93 kHz)	4
	SS	Power-on beep◆	5
	SS	No power-on beep	6
Power On Indicator	SS	Disable (LED off)	0
	SS	LED steady on ◆	1
	SS	LED flash	2
		A560/F560 series scanner doesn't support this function.	
Good Read Indicator	SS	Disable	0
	SS	Enable◆	1
Vibrator Control	SS	Disable	0
	SS	Enable◆	1
		Optional function is only available for vibrator model.	







Operation Control (A Series) Buzzer Volume



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Buzzer Volume	SS	Low	0
	SS	Medium	1
	SS	High ◆	2





Operation Control (F & L Series)



Redundancy & 1D Code Inverse Reading

F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Redundancy	SS	None	0
	SS	Level 1◆	1
	SS	Level 2	2
	SS	Level 3	3
	SS	Level 4	4
	SS	Level 5	5
		To prevent potential miss reading.	
1D Barcode Inverse Reading	SS	Disable ◆	0
	SS	Enable	1

[■] The Redundancy is the number of times the same barcode label has to be decoded before the result is transmitted. For A Series 2D Imagers, the Redundancy level is automatically adjusted by the scanner and cannot be set manually by the user.







Reread Delay & Good Read Delay Control

Family Code Selection	P.C	Parameter Selection	Option Code
Reread Delay	SS	Disable	0
(Double Scan Verification)	SS	Immediate time out ◆	1
	SS	Short time out	2
	SS	Medium time out	3
	SS	Long time out	4
	SS	Force verification	5
Good Read Delay	SS	None ◆	0
	SS	200 msec.	1
	SS	500 msec.	2
	SS	1 sec.	3
	SS	1.5 sec.	4
	SS	2 sec.	5
	SS	3 sec.	6

The Reread Delay (Double Scan Verification) is designed to inhibit FuzzyScan from reading the same bar code label twice in pre-defined short duration. Force Verification will not allow reading of the same bar code twice.

[■] This Good Read Delay is the minimum amount of time before the imager can read another bar code.







F_DEFAULT

Light Source On Time, Hands Free Time-out

Family Code Selection	P.C	Parameter Selection	Option Code
Light Source On Time	SS	Short	0
	SS	Medium	1
	SS	Long◆	2
	SS	Extremely long	3
Hands Free Time-out	SS	Short◆	0
	SS	Medium	1
	SS	Long	2
	SS	Extremely long	3
	SS	Disable	4

[•] The **Light Source On Time** is a pre-defined light source time out counter for Alternative Mode, Presentation Mode and Level Mode. The scanner keeps the light source on till the pre-defined light source on time is up. You can adjust this parameter to meet your own application requirement.

[■] The Presentation Mode, Force Mode and Flash Mode are referred to as "hands free" mode. The hands free mode will be automatically changed to manual trigger mode when you press the trigger. You can remain the scanner in manual trigger mode by setting the Hands Free Time-Out. Once the time-out duration is up (if there's no any trigger operation), the imager will revert to the original hands free mode.







F_DEFAULT

Good Read Duration, Time Delay to Low Power Mode

Family Code Selection	P.C	Parameter Selection	Option Code
Good Read Duration	SS	Short	0
	SS	Medium◆	1
	SS	Long	2
	SS	Extremely long	3
	SS	Extremely short	4
Time Delay to Low Power Mode	SS	1 sec	0
	SS	3 sec	1
	SS	5 sec	2
	SS	7 sec	3
	SS	9 sec	4
	SS	Immediate ◆	5

[■] The **Light Source On Time** is a pre-defined light source time out counter for Alternative Mode, Presentation Mode and Level Mode. The scanner keeps the light source on till the pre-defined light source on time is up. You can adjust this parameter to meet your own application requirement.

[•] Use **Good Read Duration** (Good Read Beep and Vibration Duration) to define beeps and vibration according to operator preference and work environment.

[■] The **Time Delay to Low Power Mode** sets the time for scanner to enter low power mode after any scanning activity. This setting is only available for the scanner in low power mode.







Presentation Auto-Sense & Sensitivity

Family Code Selection	P.C	Parameter Selection	Option Code
Presentation Auto-sense	SS	Disable	0
	SS	Enable◆	1
Presentation Sensitivity	SS	Level 1	0
1 1 1 1 1 1 1	SS	Level 2	1
	SS	Level 3	2
	SS	Level 4	3
	SS	Level 5 ◆	4
	SS	Level 6	5
	SS	Level 7	6

- When enabling the **Presentation Auto-sense**, the scanner can be switched from hand-held and hand-free scanning automatically when working with the SmartStand.
- The Presentation Sensitivity is used to configure the sensitivity level when the scanner is set as presentation mode. The higher lever means higher sensitivity for detecting the barcode.



Condensed DataWizard

Preamble, Postamble, Data Length, Symbol ID Transmission



Family Code Selection	P.C	Parameter Selection	Option Code
Preamble	SS MS	None ◆ 1-15 characters Maximum 15-character input; scan "FIN" to terminate this selection.	FIN [00-7F], [FIN]
Postamble	SS MS	None ◆ 1-15 characters Maximum 15-character input; scan "FIN" to terminate this selection.	FIN [00-7F], [FIN]
Data Length Transmission	SS SS	Disable ◆ Enable 2~4 digits data length transmission	0
Symbology ID Transmission	SS SS SS SS SS	Disable symbology ID transmission ◆ Enable prefix symbology ID transmission Enable suffix symbology ID transmission Enable both prefix and suffix symbology ID transmission Enable prefix AIM symbology ID transmission Enable suffix AIM symbology ID transmission	0 1 2 3 4 5
Details the most of Addition	SS	Enable both prefix and suffix AIM symbology ID transmission	6

[■] DataWizard is the most powerful, Artificial-Intelligence based data editing expert system provided specially for the FuzzyScan family bar code readers. Through DataWizard, you can process the scanned data prior the transmissions in many ways as Insert, Delete, Match, Verify, Replace, Reorganize, and Repeat Transmission. It will help you to arrange the transmission of scanned data to any specific format without software modification.

[■] Due to the resources concern, **Full-feature DataWizard** is only supported by **PowerTool**. Through the PowerTool, all settings and configurations can be done on-screen on Windows-based operating system.

A Condensed Version DataWizard is provided by each FuzzyScan scanner. Through this menu, the condensed DataWizard can be utilized easily via barcode menu readings.

[■] Please note that all "Character" input should be referred to the ASCII/HEX Table listed in Appendix to find matched HEX value.

[•] If you have any problem to use DataWizard, please refer to following pages for details, as well as consult your local FuzzyScan vendor or our web site for further assistance.





Condensed DataWizard Data Formatter Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code	2ndOption Code
Formatter Control	SS	Disable ◆	FIN	
	MS	Select one bar code symbology	(2 digits)	automatic termination
	MS	Select all bar code symbologies	00	automatic termination
1st Insertion	SS	Disable ◆	FIN	
	DS	Enable	(2 digits)	[1-3 characters], [FIN]
			position	
		2-digits identified position; max. 3 insertion characters		
2nd Insertion	SS	Disable ◆	FIN	
	DS	Enable	(2 digits)	[1-3 characters], [FIN]
			position	
		2-digits identified position; max. 3 insertion characters		
3rd Insertion	SS	Disable ◆	FIN	
	DS	Enable	(2 digits)	[1-3 characters], [FIN]
			position	
		2-digits identified position; max. 3 insertion characters		
4th Insertion	SS	Disable ◆	FIN	
	DS	Enable	(2 digits)	[1-3 characters], [FIN]
			position	
		2-digits identified position; max. 3 insertion characters		

[■] The **Data Formatter** is used to edit the scanned raw data prior to transmitting the data to the host computers or terminals. It allows you to select desired bar code symbologies for formatter control, and provides **Multiple Position Insertion** and **Multiple Character Insertion** (max three characters) in the identified position.

[■] While the Data Formatter is enabled, it arranges only scanned data without **Preamble**, **Postamble**, **STX**, **ETX**, **Data Length**, **Prefix/Suffix Symbology ID** or **Record Suffix**. All of the above programmable parameters perform the same function depending on your setting.

[■] Regarding the "Bar Code Selection" and "Position Calculation" of data formatter, please refer to page75 for details.

[■] Please note that all "Character" input should be referred to the ASCII/HEX Table listed in Appendix to find matched HEX value.





Condensed DataWizard Data Verifier Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code	2ndOption Code
Verifier Control	SS	Disable ◆	FIN	
	MS	Select one bar code symbology	(2 digits)	automatic termination
	MS	Select all bar code symbologies	00	automatic termination
Identified Data Length	SS	Disable ◆	FIN	
	DS	Enable Determine the identified data length for verification.	(2 digits)	
1st Identified Character	SS	Disable ◆	FIN	
	DS	Enable	(2 digits)	[00-7F]
		2-digits checking position; 1 identified character	position	
2nd Identified Character	SS	Disable ◆	FIN	
	DS	Enable	(2 digits)	[00-7F]
		2-digits checking position; 1 identified character	position	
3rd Identified Character	SS	Disable ◆	FIN	
	DS	Enable	(2 digits)	[00-7F]
		2-digits checking position; 1 identified character	position	

[■] The Data Verifier is used to provide advanced verification for error-free scanning and to work as an Embedded Data Transmitting Filter.

All data must conform to the **Identified Bar Code Symbologies**, **Identified Data Length**, and one to three **Identified Characters** in the checking position. Otherwise, the FuzzyScan will not transmit the data to the host computers or terminals, but will instead issue 3 **long beeps** for verification error and **skip** the scanned data.

[■] The Data Verifier checks only scanned data without Preamble, Postamble, STX, ETX, Data Length, Prefix/Suffix Symbology ID or Record Suffix.

[■] Regarding the "Bar Code Selection" and "Position Calculation" of Data Verifier, please refer to page 75 for details.

[■] Please note that all "Character" input should be referred to the ASCII/HEX Table listed in Appendix to find matched HEX value.





Condensed DataWizard Data Replacer Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code	2ndOption Code
Replacer Control	SS MS MS	Disable ◆ Select one bar code symbology Select all bar code symbologies	FIN (2 digits) 00	automatic termination automatic termination
1st Replacement	SS DS	Disable ◆ Enable 2-digits identified position; 1 replacement character	FIN (2 digits) position	[00-7F]
2nd Replacement	SS DS	Disable ◆ Enable 2-digits identified position; 1 replacement character	FIN (2 digits) position	[00-7F]
3rd Replacement	SS DS	Disable ◆ Enable 2-digits identified position; 1 replacement character	FIN (2 digits) position	[00-7F]

[■] The **Data Replacer** is used to edit the scanned raw data prior to transmitting the data to the host computers or terminals. It allows you to select desired bar code symbologies for replacer control, and provides **Multiple Position Replacement** in the identified position.

- Regarding the "Bar Code Selection" and "Position Calculation" of Data Replacer, please refer to page75 for details.
- Please note that all "Character" input should be referred to the ASCII/HEX Table listed in Appendix to find matched HEX value.

[•] All data must conform to the **Identified Bar Code Symbologies**, and one to three **Identified Characters** in the identified position. While the Data Replacer is enabled, it arranges only scanned data without **Preamble**, **Postamble**, **STX**, **ETX**, **Data Length**, **Prefix/Suffix Symbology ID** or **Record Suffix**.





Condensed DataWizard Data Organizer Setting



F DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code	2nd Option Code
Organizer Control	SS MS MS	Disable ◆ Select one bar code symbology Select all bar code symbologies	FIN (2 digits) 00	Automatic termination Automatic termination
1st Organization	SS DS	Disable ◆ Enable 2-digits identified position; Forward/backward data transmission setting	FIN (2 digits) position direction	0 (Forward) ◆ 1 (Backward)
2nd Organization	SS DS	Disable ◆ Enable 2-digits identified position; Forward/backward data transmission setting	FIN (2 digits) position direction	0 (Forward) ◆ 1 (Backward)
Include/Exclude Control	SS DS	Transmitted data excluded the data of identified position ◆ Transmitted data included the data of identified position	0	

[■] The **Data Organizer** is used to edit the scanned raw data prior to transmitting the data to the host computers or terminals. It allows you to select desired bar code symbologies for organizer control, and provides maximum two identified positions to send the data **forward** or **backward**. It also allows you to control the transmitted data **including** or **excluding** the data of identification position. Please refer to the application example listed in page 75 for details.

- Regarding the "Bar Code Selection" and "Position Calculation" of Data Organizer, please refer to page 75 for details.
- Please note that all "Character" input should be referred to the ASCII/HEX Table.

[■] While the Data Organizer is enabled, it arranges only scanned data without Preamble, Postamble, STX, ETX, Data Length, Prefix/Suffix Symbology ID or Record Suffix.



Select a Bar Code Symbology

You can select one or all types of bar code symbologies to use Condensed DataWizard for advanced transmission arrangement. If you scan "00" to select all types, the FuzzyScan will arrange all incoming data to meet your pre-defined format. If you want to select only one type bar code, please select one of the option code listed below.

1D Ba	r Code	Symbology	
Code 128	01	Matrix 2 of 5	38
GS1-128	31	Interleaved 2 of 5	48
UPC-A	02	China Postal Code	58
UPC-A with 2 supplement	32	German Postal Code	68
UPC-A with 5 supplement	42	Standard/Industrial 2 of 5	08
UPC-E	03	Code 93	09
UPC-E with 2 supplement	33	Code 11	10
UPC-E with 5 supplement	43	MSI/Plessey	11
EAN-13	04	UK/Plessey	12
EAN-13 with 2 supplement	34	Telepen	13
EAN-13 with 5 supplement	44	GS1 DataBar	14
EAN-8	05	GS1 DataBar Limited	22
EAN-8 with 2 supplement	35	GS1 DataBar Expanded	23
EAN-8 with 5 supplement	45	Composite Codes	24
Codabar/NW-7	06	IATA	15
Code 39	07	Coupon Code	16
Code 32	37	PDF417	17
Trioptic Code 39	47	Micro PDF417	25
		Codablock F	18
		Code 16K	19
		Code 49	20

2D Bar Code Symbology								
QR Code	A0	MaxiCode	A2					
Micro QR Code	A0	Aztec Code	A3					
DataMatrix	A1	Chinese Sensible Code	A4					
GS1 DataMatrix	A5							

	Postal	Code	
Korea Post Code	21	Japanese Post	B4
Australian Post	В0	KIX Post	B5
British Post	B1	Planet Code	B6
Intelligent Mail barcode	B3	Postnet	B8

Position Calculation [Data Formatter]

If there is a 5-character input data string, refer to the following to calculate the actual position for insertion:

		Х		Х		Х		Х		Х	
(00		01		02		03		04		05

[Data Verifier, Data Replacer, Data Organizer]

If there is a 11-character data string, please refer to the following to calculate the actual position for identification.

Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х
00	01	02	03	04	05	06	07	08	09	10



Application Example

If your bar code label is a 16-digit Interleaved 2 of 5 which includes the information of 6-digit date code, 6-digit serial number and 4-digit unit price, you want the FuzzyScan do the following for you without software modification:

- Apply only Interleaved 2 of 5 to the condensed DataWizard.
- Check bar code is actually with 16-digit length.
- Allow bar code output whose date code is leading with "9".
- Three outputs with "TAB" suffix.
- The date code output should skip "9" and replaced it by "A".
- The serial number output should be led with "SN".
- The unit price output should be skipped the first 2 digits.
- Test Bar Code: 9810251234569876
- Actual Output : A81025[TAB]SN123456[TAB]76[TAB]

Programming Procedure [Data Verifier]

- Scan "Program" to enter the programming mode.
- Scan "Verifier Control" and set bar code symbology to "48" (Interleaved 2 of 5).
- Scan "Identified Data Length" and set the length to "16".
- Scan "1st Identified Character" and set the identified position to "00", then set the identified character to "39" (Hex Code of 9).

[Data Formatter]

- Scan "Formatter Control" and set bar code symbology to "48".
- Scan 1st Insertion" and set the identified position to "06", then inserted characters to "09" (Hex Code of TAB), "53" (Hex Code of S), "4E" (Hex Code of N).
- Scan "2nd Insertion" and set the identified position to "12", then inserted character to "09". In the final, you must scan "FIN" (Finish) code to terminate this selection.
- Scan "3rd Insertion" and set the identified position to "16", then inserted character to "09". In the final, you must scan "FIN" (Finish) code to terminate this selection.

[Data Replacer]

- Scan "Replacer Control" and set bar code symbology to "48".
- Scan "1st Replacement" and set the identified position to "00", then replaced character to "41" (Hex Code of A).

[Data Organizer]

- Scan "Organizer Control" and set bar code symbology to "48".
- Scan "1st Organization" and set the identified position to "16", then set the data transmission to "0" (forward).
- Scan "2nd Organization" and set the identified position to "17", then set the data transmission to "1" (backward).
- Scan "END" (Exit) to terminate the programming.

[Important Notice]

Please note that Condensed DataWizard will follow the preset working flow as below:

Verifier → Formatter → Replacer → Organizer

So when you set the identified position in Data Organizer, you must consider the inserted data which you already set via Data Formatter.

cino°

APPENDIX

Symbology ID Table

Each AIM Code Identifier contains the three-character string **]cm** where:] = Flag Character; c = Code Character; m = Modifier Character

				•	1D Symbolog	y ID Table					
		Cin	o ID	A	AIM ID			Cin	o ID	Al	M ID
Code Family	Primary Format	Hex Value	Char.	Code Char.	Modified Char.	Code Family	Primary Format	Hex Value	Char.	Code Char.	Modified Char.
	UPC-A	2			0		EAN/JAN-8	05			4
	UPC-A with 2 supple.	32	Α		1		EAN/JAN-8 with 2 supple.	35	N	E	1
	UPC-A with 5 supple.	42		Е	2	- EAN/JAN	EAN/JAN-8 with 5 supple.	45			2
UPC	UPC-E	3			0	EAIN/JAIN	EAN/JAN-13	04			0
	UPC-E with 2 supple.	33	Е		1		EAN/JAN-13 with 2 supple.	34	F	Е	1
	UPC-E with 5 supple.	43			2		EAN/JAN-13 with 5 supple.	44			2
	Example: A UPC-A bar code 0 transmitted as]E0 0123456789		50 with 2 s	upplement	: 12 is		Example: A EAN/JAN-8 bar transmitted as]E4 49123562		3562 with 5	suppleme	nt 12345 is
Cada 100	Code 128	01	В	С	m	Code 93	Code 93	09	Н	G	m
Code 128	GS1-128	31	С		1	Code 11	Code 11	10	Р	Н	m
Codabar	Codabar/NW-7	06	D	F	m	MSI/Plessey	MSI/Plessey	11	R	М	m
	Standard/Industrial 2 of 5	08	I	S	0	UK/Plessey	UK/Plessey	12	S	Р	0
	Matrix 2 of 5	38	K	Х	0	Telepen	Telepen	13	Т	В	m
	Interleaved 2 of 5						GS1 Databar	14			
Code 25		48	J	I	m	GS1 DataBar	GS1 DataBar Limited	22	X	e	m
Code 25							GS1 DataBar Expanded	23	^	e	m
	China Postal Code	58	L	Х	0	Composite	Composite Code	24			
	China Postal Code	50	L	^	0		Code 39	07	G	Α	m
	German Postal Code	68	М	I	m	Code 39	Code 39 Trioptic	47	W	Х	0
IATA	IATA	15	0	R	m		Code 32	37	G	Α	0
	UCC Coupon Code		<u>7</u>			PDF417	PDF417	17	V	L	m
			<u> </u>				Micro PDF417	25	V	L	111
UCC Coupon	Example : A UPC-A 51234567				97 bar code	Codablock	Codablock F	18	Υ	0	m
	is transmitted as E0 512345678 Example: A EAN-13 99234567	-			207 har codo	Korea Post	Korea Post Code	21	а	Χ	0
	is transmitted as]E0 99234567				Zar Dai GUUB	Remark: Above	e examples are given for the tra	nsmission	of AIM ID.		



				2	2D Symbolog	y ID Table					
		Cin	o ID	A	IM ID			Cin	o ID	Al	M ID
Code Family	Primary Format	Hex Value	Char.	Code Char.	Modified Char.	Code Family	Primary Format	Hex Value	Char.	Code Char.	Modified Char.
QR Code	QR Code					British Post	British Post	B1	h		0
Micro QR Code	Micro QR Code	A0	b	Q	m	Intelligent Mail barcode	Intelligent Mail barcode	В3	j		0
Data Matrix	Data Matrix	A1		۵		Japanese	Jananasa Dast	B4			0
Data Matrix	GS1 Data Matrix	A5	С	d	m	Post	Japanese Post	D4	k	Х	U
MaxiCode	MaxiCode	A2	d	U	m	KIX Post	KIX Post	B5	I		0
Aztec Code	Aztec Code	A3	е	Z	m	Planet Code	Planet Code	В6	m		0
Chinese Sensible	Chinese Sensible	A4	f	Х	0	Postnet	Postnet	В8	0		0
Australian Post	Australian Post	В0	g		0						

cino°


Keyboard Function Code Table

No.	ANSI	ASCII	Key Function 1	Key Function 2	Key Function 3*
00	NUL	00H	RESERVED	Ctrl + @	CTRL MAKE (Left)
01	SOH	01H	CTRL (Left)	Ctrl + A	CTRL BREAK (Left)
02	STX	02H	ALT (Left)	Ctrl + B	ALT MAKE (Left)
03	ETX	03H	SHIFT	Ctrl + C	ALT BREAK (Left)
04	EOT	04H	CAPS LOCK	Ctrl + D	CAPS LOCK
05	ENQ	05H	NUM LOCK	Ctrl + E	NUM LOCK
06	ACK	06H	ESC	Ctrl + F	ESC
07	BEL	07H	F1	Ctrl + G	F1
08	BS	08H	BACK SPACE	Ctrl + H	BACK SPACE
09	HT	09H	TAB	Ctrl + I	TAB
10	LF	0AH	F2	Ctrl + J	F2
11	VT	0BH	F3	Ctrl + K	F3
12	FF	0CH	F4	Ctrl + L	F4
13	CR	0DH	ENTER (CR)	Ctrl + M	ENTER (CR)
14	SO	0EH	F5	Ctrl + N	F5
15	SI	0FH	F6	Ctrl + O	F6
16	DLE	10H	F7	Ctrl + P	F7
17	DC1	11H	F8	Ctrl + Q	F8
18	DC2	12H	F9	Ctrl + R	F9
19	DC3	13H	F10	Ctrl + S	F10



No.	ANSI	ASCII	Key Function 1	Key Function 2	Key Function 3
20	DC4	14H	F11	Ctrl + T	WIN MAKE (Left)
21	NAK	15H	F12	Ctrl + U	WIN BREAK (Left)
22	SYN	16H	INS (Insert) (Edit)	Ctrl + V	SHIFT MAKE (Left)
23	ETB	17H	DEL (Delete) (Edit)	Ctrl + W	SHIFT BREAK (Left)
24	CAN	18H	HOME (Edit)	Ctrl + X	HOME (Edit)
25	EM	19H	END (Edit)	Ctrl + Y	END (Edit)
26	SUB	1AH	PAGE UP (Edit)	Ctrl + Z	PAGE UP (Edit)
27	ESC	1BH	PAGE DOWN (Edit)	Ctrl + [PAGE DOWN (Edit)
28	FS	1CH	UP (Edit)	Ctrl + \	UP (Edit)
29	GS	1DH	DOWN (Edit)	Ctrl +]	DOWN (Edit)
30	RS	1EH	LEFT (Edit)	Ctrl + 6	LEFT (Edit)
31	US	1FH	RIGHT (Edit)	*see below note	RIGHT (Edit)

 [■] The **Key Function Table 3** is only supported by *A series and PA series*.

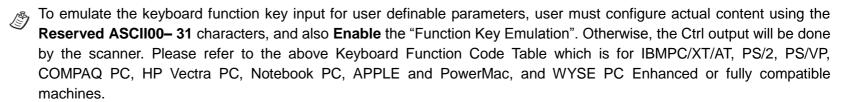

The last character in the Ctrl Output column is varied for different countries.

Country (refer	to Keyboard Layo	out)& Character			
United State	-	Switzerland	-	France	=
Belgium	-	UK	-	Germany	-
Sweden	-	Denmark	-	Norway	-
Spain	-	Italy	-		



Code Page - Table of Corresponding Languages


Description	Code Page	Description	Code Page
Albanian	850	Hungarian	852
Arabic	1256	Icelandic	850
Arabic	720	Italian	850
Baltic	1257	Japanese	932
Bulgarian	866	Korean	949
Catalan	850	Latin 1	1252
Croatian	852	Latin 2	1250
Cyrillic	1251	Latin 5	1254
Czech	852	Latin American	850
Danish	850	Latvian	775
Dutch	850	Lithuanian	775
Estonian	775	Norwegian	850
English - United Kingdom	850	Polish	852
English - Australia	850	Portuguese	850
English - Canada	850	Romanian	852
English - New Zealand	850	Russian	866
English - United States	437	Serbian	855
English - South Africa	437	Slovakian	852
English - Philippines	437	Slovenian	852
Finnish	850	Spanish	850
French	850	Swedish	850
German	850	Chinese (Tradition)	950
Greece	737	Chinese (Simple)	936
Greece	1253	Thai	874
Hebrew- write	1255	Turkish	857
Hebrew Israel	862	Vietnamese	1258

Code Page - Unicode Hex Input Setup


1. Windows-Setting up the Windows Registry

Step 1:Open the Registry Editor. You can do so by typing "regedit" in the "Search Windows" function or in Command Prompt.

Step 2:Go to HKEY_CURRENT_USER\Control Panel\Input Method

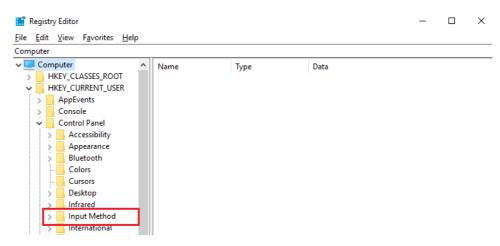


Step 3: Right-click on mouse or press shift + F10 (on keyboard) to add a new String Value (of type "REG_SZ").

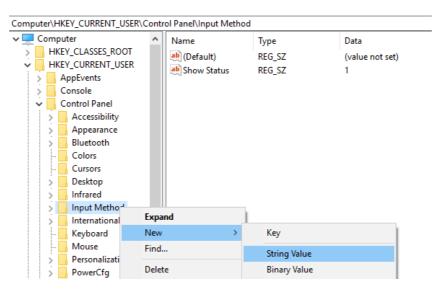



Step 4: Name the new String value as "EnableHexNumpad" and set its Value data to "1".

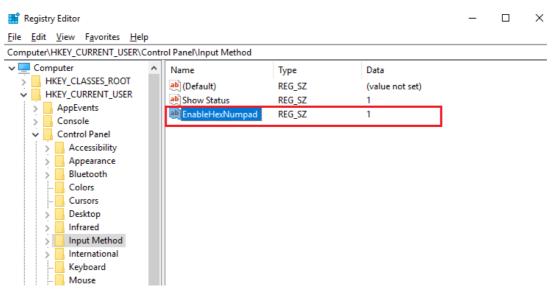

Step 5: Reboot the computer.


2. MAC - Adding Unicode Hex Input in menu bar

Step 1: Go to the Apple Menu -> System Preferences -> Keyboard






Step 2: On the Keyboard tab, click on "Input Sources" and check the "Show Input menu in menu bar" box.

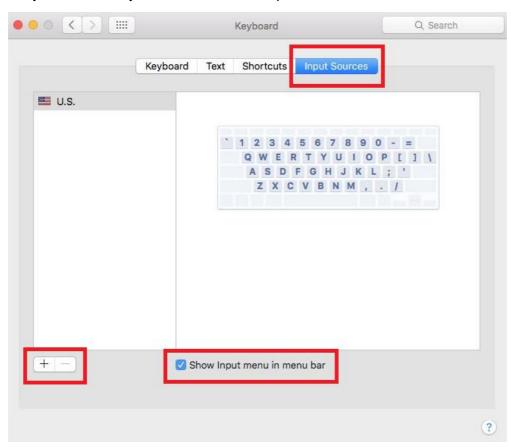

Step 3: Click the "+" button to add an input source.



Step 4:Scroll to and select "Others". Click on "Unicode Hex Input" (you can also use the Search function to find it). When done, click on the "Add" button.

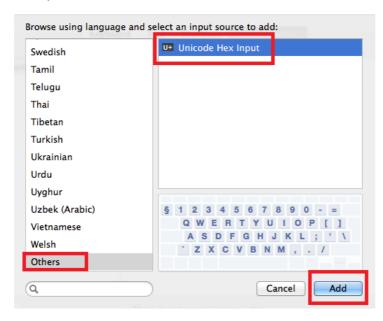

Step 5: Close the Keyboard Preferences menu.

Step 6: Change the input selection to Unicode Hex Input in menu bar.





ASCII Input Shortcut

To configure the user definable parameters of FuzzyScan via programming menu, FuzzyScan will ask you to scan your desired ASCII value in **HEX** form. You have to refer to the "**HEX/ASCII Table**" for details.

Example:

If you want the scanned data output leading with a Dollar Sign, you have to set the "Preamble" to "\$". The configuration procedure is listed below for reference.

- Scan the system command PROGRAM listed on page 3-24 to enter programming mode.
- Scan family code PREAMBLE to select this family.
- Refer to the Hex/ASCII Table, you will find the HEX value of "\$" is 24.
- Scan the option code 2 listed on the fold out back cover.
- Scan the option code 4 listed on the fold out back cover.
- Scan the system command FIN (Finish) to terminate Preamble setting.
- Scan the system command End to exit the programming mode for normal operation.

HEX/ASCII Reference Table

H	0	1	2	3	4	5	6	7
0	NUL	DLE	SPACE	0	@	Р	•	р
1	SOH	DC1	!	1	Α	Q	а	q
2	STX	DC2		2	В	R	b	r
3	ETX	DC3	#	3	С	S	С	s
4	EOT	DC4	\$	4	D	T	d	t
5	ENQ	NAK	%	5	Е	U	е	u
6	ACK	SYN	&	6	F	٧	f	٧
7	BEL	ETB	1	7	G	W	g	W
8	BS	CAN	(8	Н	Χ	h	Х
9	HT	EM)	9	1	Υ	i	у
Α	LF	SUB	*	:	J	Z	j	Z
В	VT	ESC	+	;	K	[k	{
С	FF	FS	,	'	L	1	I	
D	CR	GS	-	П	М]	m	}
E	SO	RS		>	N	٨	n	~
F	SI	US	1	?	0	_	0	DEL

Example: ASCII "A" → HEX "41"; ASCII "a" → "6		Example:	ASCII	"A" →	HEX '	41 ": <i>i</i>	ASCII	"a" →	"61
---	--	----------	-------	-------	-------	-----------------------	-------	-------	-----

: High Byte of HEX Value

: Low Byte of HEX Value

Host Interface Quick Set Commands



RS232 Serial



Keyboard Replacement









PS/2 (DOS/V) KBW TurboMode



Operation Mode Quick Set Commands (F & L Series)



Low Power (Low power trigger)



◆Trigger (External triggering)



Presentation (Auto sensing)



Alternative (Periodic power off)







Force (Continued power on)



Toggle (Repeat reading)



Diagnostic (Test reading)

Operation Mode Quick Set Commands (A Series)



◆Trigger (External triggering)











Force (Continued power on)



Toggle (Repeat reading)





FuzzyScan Programming Manual

Option Codes











FIN (Finish)





















END (Exit)

System Commands



PROGRAM (Enter Programming Mode)







User Default



System Information List (SYSLIST)



Factory Default



- Factory Default: After scanning" Factory Default" command, all parameters will be returned to factory default value.
- Master Default: After scanning "Master Default" command, the scanner will remain the pre-set parameters of Host Interface Selection, Keyboard Interface Control (except Record Suffix; Preamble; Postamble), Serial Interface Control (except Record Suffix; Preamble; Postamble), and Wand/Laser Emulation Control, the rest of parameters will be returned to default value.
- User Default: After scanning "Save User Default" command, all current parameters will be stored to the flash memory. Once you change the parameter and would like to return to previous setting, please scan "User Default".





FuzzyScan Family Programming Manual

CINO GROUP
PC WORTH INT'L CO., LTD.

