

# FUZZYSCAN A780BT HC

Antimicrobial 2D Cordless Imager



## The premium and antimicrobial 2D cordless imager

Powered by Cino's exclusive FuzzyScan imaging technology, the A780BT HC features a comprehensive lineup to fulfill various scanning needs. In addition, it's capable of reading most real-world challenging and problematic barcodes. Boasting broad Bluetooth connectivity and an antimicrobial yet durable over-mold enclosure, the A780BT HC provides users with a reliable cordless solution to fulfill diverse healthcare scanning demands. Moreover, the battery-free solution, versatile functionality, and FuzzyScan DNA make A780BT HC an ultimate solution to meet the stringent requirements of hygiene-sensitive applications.

- Disinfectant-ready enclosure with antimicrobial additives
- Compliant with the JIS Z2801:2000 antimicrobial standard
- Instant cordless migration via Cino Smart Cradle
- Up to 100m of communication coverage while working with Cino Smart Cradle
- One-step & hassle-free pairing
- UltraCap™ Battery-Freesolution supported
- Works with Bluetooth-enabled Windows, MAC, and Linux hosts
- Compatible with most popular Android and iOS mobile devices
- Batch Scanning for simple stocktaking
- Built-in vibration function for tactile confirmations
- Withstands 2m drops to concrete
- Inherits the powerful FuzzyScan DNA

## Sanitation-Friendly

With a disinfectant-ready enclosure incorporated with antimicrobial additives, the A780BT HC series imager is specifically designed for use in healthcare and hygiene-sensitive applications.

### Disinfectant-Ready Enclosure

The imager features a disinfectant-ready enclosure that can be wiped down with Cino's recommended cleaning solutions. Maintain hygiene standards without causing any damage to the healthcare imager.

### Inclusion of Antimicrobial Additives


The housing's plastic material is incorporated with silver inorganic antimicrobial additives that will not wear off during the imager's lifetime. The antimicrobial additives have been lab tested to ensure that they inhibit the growth of microorganisms.

### Compliance with International Antimicrobial Standards

The A780BT HC imager complies with the JIS Z2801:2000 and the most commonly used ISO22196 antimicrobial standard. This ensures that you can use this healthcare imager in hygiene-sensitive applications around the world.

## Wireless Connectivity and Beyond

For Cino cordless imagers, superior performance is just the start. Comprehensive connectivity and one-step pairing will change the way you work by providing more agility, flexibility and productivity.

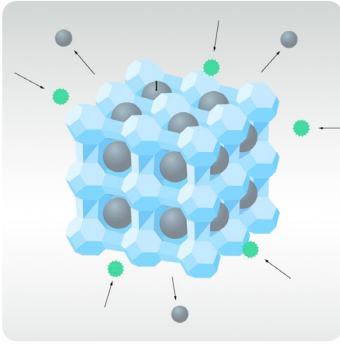

**Enclosure with  
Antimicrobial Agent**



**Exclusive FuzzyScan  
Imaging Technology**

### Instant Cordless Migration

No Bluetooth? Not a problem! Pair your A780BT HC imager with Cino's Smart Cradle or Smart Dongle to instantly overcome the lack of Bluetooth connectivity. Without any additional costs, this instant "Plug-and-Play" cordless migration provides you with a working range of up to 100 meters.

### Broad Connectivity

Through the HID or SPP profile, Cino cordless imagers can connect to the most popular Bluetooth-enabled Windows, MAC, and Linux hosts as well as Android and iOS mobile devices.

### One-Step & Hassle-Free Pairing

Pairing Cino cordless imagers is a breeze - just "Scan to pair". Scan the "Quick Pair Barcode" on the smart cradle or smart dongle to instantly create a pairing with your A780BT HC. To pair the A780BT HC with your remote host, you can easily scan the on-screen "Quick Pair Barcode" generated by Cino **ConnectWizard™** to simplify Bluetooth pairing process.

### Scan All Your Needs

Powered by the exclusive FuzzyScan Imaging technology, the A780BT HC imager is capable of reading a vast array of challenging and problematic barcodes. Whether your barcodes are wrinkled, dirty, soiled or displayed on paper, plastic, metal, digital screens, or curved surfaces, your A780BT HC imager performs quick and accurate readings.

### Cutting Edge Imaging Technology

Powered by the state-of-the-art AI-based machine vision, the exclusive FuzzyScan imaging technology is a performance-driven innovation. Incorporated with advanced optics and powerful hardware platform, all Cino scanners deliver unrivalled scanning speed and accuracy across virtually any type of real-world barcodes.

### A Complete Lineup

The A780BT HC series provides two different models to ensure maximum suitability for different scanning needs.

- The Standard-range model offers superior reading performance on both regular and problematic real-world barcodes, making it suitable for a wide range of applications.
- The High-density model is purpose-built to read DPM-like, ultra-high density, and very small 2D barcodes that appear on items such as electronic components, jewelry tags, and medical equipment.

### Practical Functionalities

The advantages of Cino cordless imagers go beyond the ultimate mobility delivered via Bluetooth technology. Powered by more practical functions, the FuzzyScan A780BT HC imager enables you to complete various business tasks and maximize productivity.

#### "On the Spot" Data Transmissions

"Online Scanning" sends data to hosts immediately after each scan. If the "Out-of-range-scanning" function is enabled, the imager can continue to scan and retain up to 5,000 EAN barcodes when it loses the Bluetooth connection. Once back into radio range, it will automatically reconnect and transmit all stored data to the host.



## Battery-Free Solution

### Inventory Counts Made Simple

“Batch Scanning” is ideal and useful for simple stocktaking. When you use this function, all scanned data will be stored into the imager’s flash memory. Once data transmission is activated, all stored data will be sent to the host as a batch. The A780BT HC imager can store a maximum of **100,000 EAN** barcodes per batch. Moreover, you can add a quantity value following each scanned data.

### Verifying Data Uniformity Made Easy

“Validation Scanning” enables the A780BT HC imager to compare scanned data against the stored master data to verify data uniformity. This function is useful if data verification is needed during “shipping and receiving” or “order picking”.

## UltraCap™ Battery-Free Solution

The Cino Battery-Free solution is powered by the UltraCap™ Capacitor. This alternative power source is purpose-built on the concerns of cost saving and environmental sustainability. The UltraCap™ Capacitor is ideal for applications requiring a very quick charge to fulfill short-to medium-term operations, such as retail, hospitality, healthcare, and so on.

### Swappable & Interchangeable

The UltraCap™ features a swappable design. It is not only interchangeable with Cino’s standard Li-ion battery, but also compatible with all FuzzyScan cordless handheld imagers.

### Lower Total Cost of Ownership

In an UltraCap™’s lifespan, you would otherwise use more than 25 standard Li-ion batteries. Therefore, this battery-free solution not only significantly lowers your replacement costs of battery, but also minimizes your potential productivity losses caused by dead batteries.

### Extended Working Time

The UltraCap™ provides the longest working time by far compared to its competition. With a capacity of 750 Farads, the largest in its class, each full charge is able to support more than **4,200 scans**. Even under intensive use, this is enough to last for at least one hour.

### Quick Get-Up-And-Go

Out of power? No worries. Every 1-minute quick charge is able to support **130 scans**. Compared to the standard Li-ion battery, this feature maximizes uptime and allows you to complete short-term scanning operations in a timely fashion.

### Eco-Friendly for a Healthier Planet

Thanks to the long lifespan of UltraCap™, it helps to reduce lots of e-waste while also exemplifying ESG consciousness and environmental sustainability in the business world.



## FUZZYSCAN DNA

### Enhanced User Experiences

Designed with a sharp aiming and multifaceted notification feedback via visual, audio as well as tactile indications, the A780BT HC delivers superior usability and great user experience.

#### Clear Audio and Visual Feedback

The A780BT HC imager uses audio and visual indicators to indicate its various statuses. The imager has a loud beeper that allows you to adjust volume and tone, while LED lights emit conspicuous, multi-color signals to help users clearly identify the current status at a quick glance.

#### Tactile Feedback

Beeping sounds are generally considered disruptive. The imager is equipped with vibration function which can be used to provide tactile feedback to users instead of beeping sounds. This is ideal for both quiet and noisy environments, such as hospitals and laboratories.

### Value Beyond Measure

FuzzyScan DNA is a collection of unique features that come with every Cino imagers at no additional cost. It delivers exceptional value beyond barcode scanning. Aside from the exclusive FuzzyScan imaging technology, Cino's scanners provide the following distinctive features to elevate user's experience:

#### DataWizard

DataWizard is a unique feature to perform advanced data formatting and complex data processing.

#### iCode

The iCode feature is a macro command barcode that allows one-step configuration with a single scan.

#### Multilingual Edge

Multilingual Edge is a useful feature that enables data output in your desired language.

#### Smart Scene

Smart Scene offers a choice of several preset configurations for various application scenarios to achieve optimal scanning performance.

#### Security Plus

Security Plus is a user-defined security mechanism that prevents the access of unauthorized barcode scanners.

#### FuzzyScan Enabling Solution

FuzzyScan Enabling Solution is a suite of software utilities that enables easy integration, management, and deployment of scanners.

# SPECIFICATIONS

## Performance Characteristics

Image Sensor	1280 x 800 Pixels
Print Contrast	15% minimum reflectance difference
Light Source	660nm red LED
Imager Field of View	41.5° H x 25.9° V
Minimum Resolution	<b>HD</b> 2.4 mil Code 39, 4.5 mil DM <b>SR</b> 2.7 mil Code 39, 4.8 mil DM
Reading Range *1	<b>HD</b> 13 mil (0.33mm) UPC/EAN up to 14.5" <b>SR</b> 13 mil (0.33mm) UPC/EAN up to 23.6"
Roll, Pitch, Skew	Roll: 360°; Pitch: ± 75°; Skew: ± 65°
Motion Tolerance	Up to 617 cm/s (243 in/s)
Configuration Setup	FuzzyScan Barcode commands FuzzyScan iCode FuzzyScan PowerTool FuzzyScan Serial Command
Data Processing	DataWizard
User Interfaces	Blue link indicator and 2-color status indicator Programmable beeper Optional vibration function
Image Capture	BMP

## Electrical Characteristics

Operating Voltage	5 ± 10% VDC
Operating Current	Scanner with Smart Cradle Charging: Maximum 870 mA Standby: Maximum 190 mA

## Power

Li-Ion Battery	2,550 mAh capacity 3-4 hour charge time over PSU 9-10 hour charge time over USB Scan-ready at 30% power: 3 hr charge over USB
UltraCap™ Capacitor	750 Farads Less than 50 minute charge time over PSU Less than 60 minute charge time over USB Over 80 minutes of use per full charge Over 4,200 scans per full charge Over 130 scans after one minute charge

## Communication Characteristics

RF Standard	Bluetooth Version 4.x
RF Frequency Band	2.402~2.4830 GHz unlicensed ISM band
Radio Link Modes	PAIR, PICO, SPP, HID
Communication Range	Up to 100 meters in open space when working with Smart Cradle, line of sight
Supported Profiles	HID (Keyboard), SPP (Serial Port)

## Physical Characteristics

Dimensions	93.5 mm (L) x 71 mm (W) x 160 mm (D) 3.68 in. (L) x 2.79 in. (W) x 6.29 in. (D)
Weight	208g (With Battery) 186g (With UltraCap™)
Color	Healthcare White
Antimicrobial Additives	Silver inorganic antimicrobial agent

## Supported Symbolologies

1D Linear Codes	Code 39, Code 39 Full ASCII, Code 32, Code 128, GS1-128, Codabar, Code 11, Code 93, GS1 DataBar, Standard & Industrial 2 of 5, Interleaved & Matrix 2 of 5, IATA, UPC/EAN/JAN, UPC/EAN/JAN with Addendum, Telepen, MSI/Plessey & UK/Plessey
2D Codes*2	PDF417, Micro PDF417, Composite Codes, DataMatrix, MaxiCode, QR Code, MicroQR, Aztec, Codablock F, Code 16K, Code 49, Chinese Sensible (Han Xin) Code
Postal Barcodes	Australian Post, US Planet, US POSTNET, Japan Post, Posi LAPA 4 State Code, German Post, British Post, Intelligent Mail, Korean Post, Dutch KIX Post, China Post
OCR	OCR A/B, MICR-E13B, US Currency

## User Environment

Drop Specifications	Withstands multiple drops from 2.0m (6.6ft) to concrete
Environmental Sealing	IP52
Operating Temperature	-10 °C to 50 °C (14 °F to 122 °F)
Storage Temperature	-40 °C to 70 °C (-40 °F to 158 °F)
Humidity	0% to 95% relative humidity, non-condensing
Ambient Light Immunity	0 ~ 106,000 lux
ESD Protection	Functional after 15kV discharge
Recommended cleaning solutions	Refer to the User Manual for the complete list of approved cleaners.

## Safety & Regulatory

EMC & Radio	CE, UKCA, FCC, BSMI, RCM, KC, NCC, VCCI, MIC, SRRC
Safety *3	LED Eye Safety IEC 62471/EN 62471, Exempt Group
Environmental	Compliant with RoHS 2.0 and REACH
Antimicrobial	JIS Z2801 : 2000

## Accessories

<b>Smart Cradle</b> RF Standard Host Interfaces	HB2112 Smart Cradle Bluetooth Version 4.x USB HID (USB Keyboard) USB VCOM (USB COM port emulation) USB OEM POS Standard RS232
<b>Cables</b>	RS232 Serial cable USB-A Cable USB-C Cable USB Power Cable
<b>Others</b>	UC2210 UltraCap™ (750 Farads) BT2100 Battery Pack (2,550mAh) US100 SmartStand Power Supply Unit (5VDC, 2A outlet)

1. The Reading Ranges are measured under manufacturing preset test environmental condition.
2. Codablock F, Code 16K, Code 49 and Chinese Sensible (Han Xin) Code are available upon request.
3. Don't stare into the LED beam.

